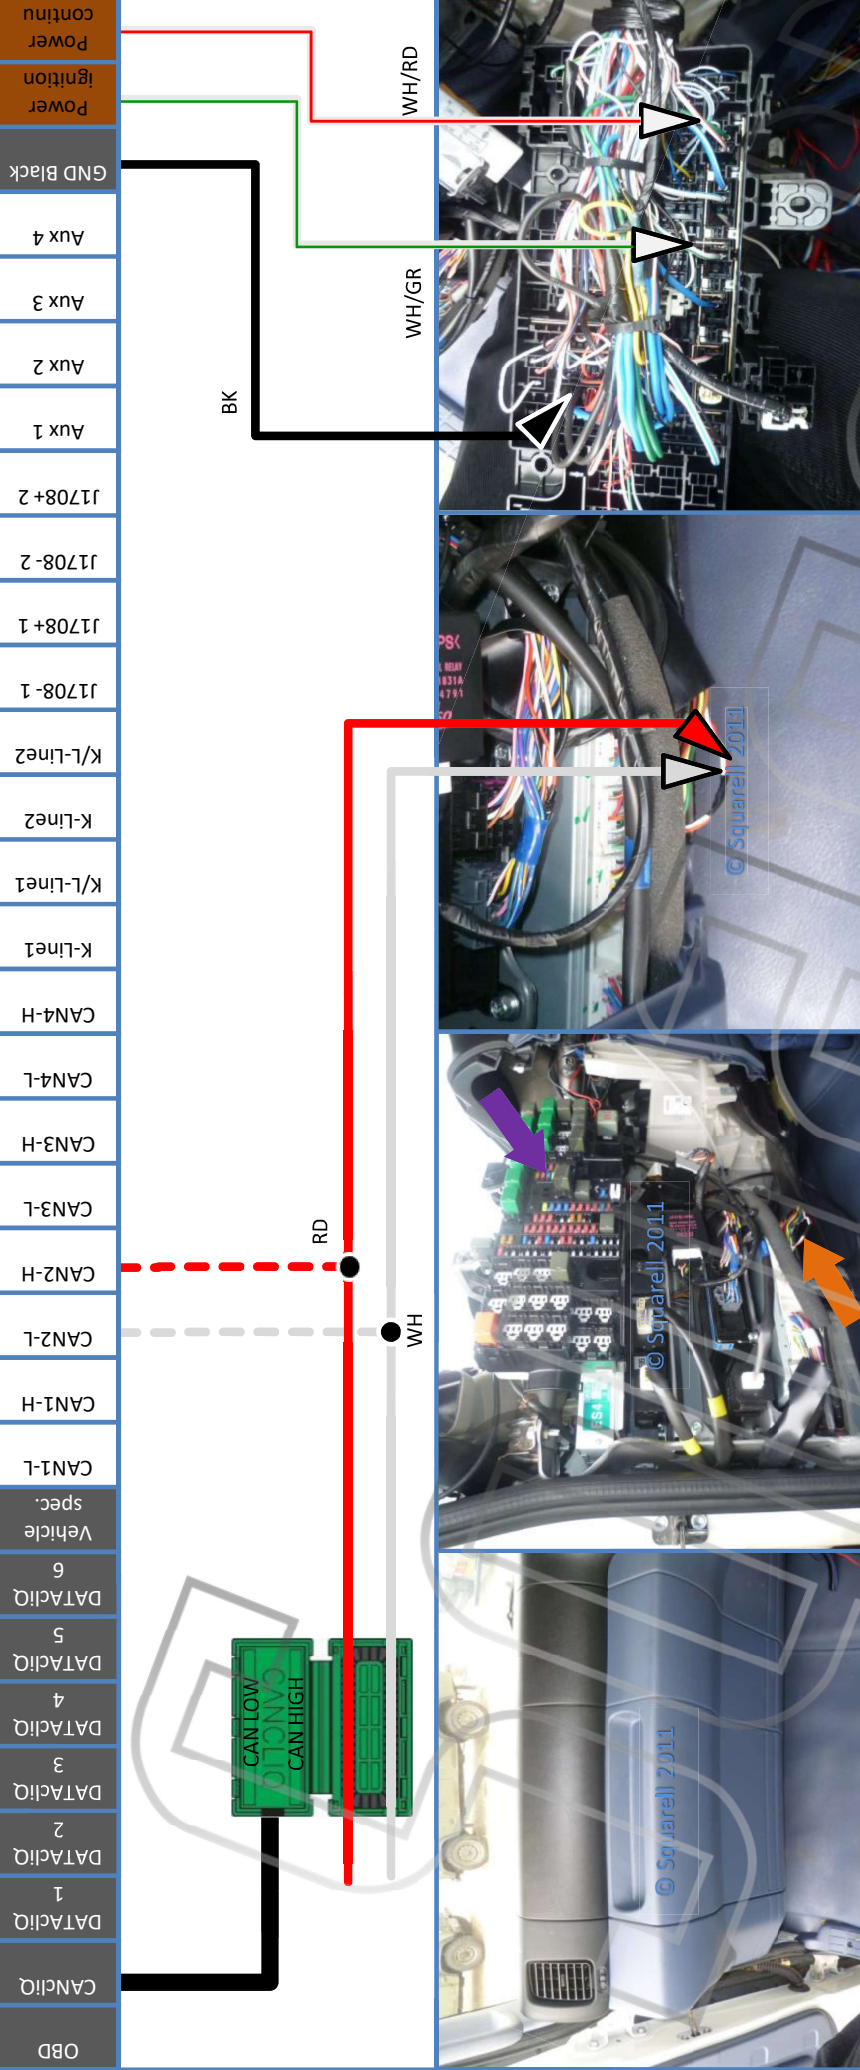


Hino Ranger / 500 (4th gen) 2001+

**Location**

- At passenger side
- Remove lower dashboard panel
- Remove upper dashboard panel
- Remove right side dashboard panel

CANbus

Untwist Red and White wires,
Place Red wire in CAN High
Place white wire in CAN Low
Close CANcliQ.

Power + Ground

Connections at passenger side fuse box (Purple arrow)

 
Ground (KL31) :
Black wire (Black arrow)

Continuous Power (KL30) :
White wire with Red trace (White/Red arrow)

Power on Ignition (KL15) :
White wire with Green trace (White/Green arrow)

Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires.





CANbus

Power + Ground

Connections at passenger side behind the fuse box (Purple arrow)

Ground (KL31) :
Free terminal on the Black connector (Black wire with grey strips)

Continuous Power (KL30) :
Free terminal on the White/Black connector (White wire with Red traces)

Power on Ignition (KL15) :
Free terminal on the White/Black connector (White wire with Blue traces)

Version 24102013 ENG
Copyright © Squarell 2013

