



Renault Kerax DCI Euro 3,4 2002-2006																													
</																													

Renault Kerax DXI Euro 4,5,EEV 2006-2013																									

Renault Kerax DXI Euro 4,5,EEV 2006-2013

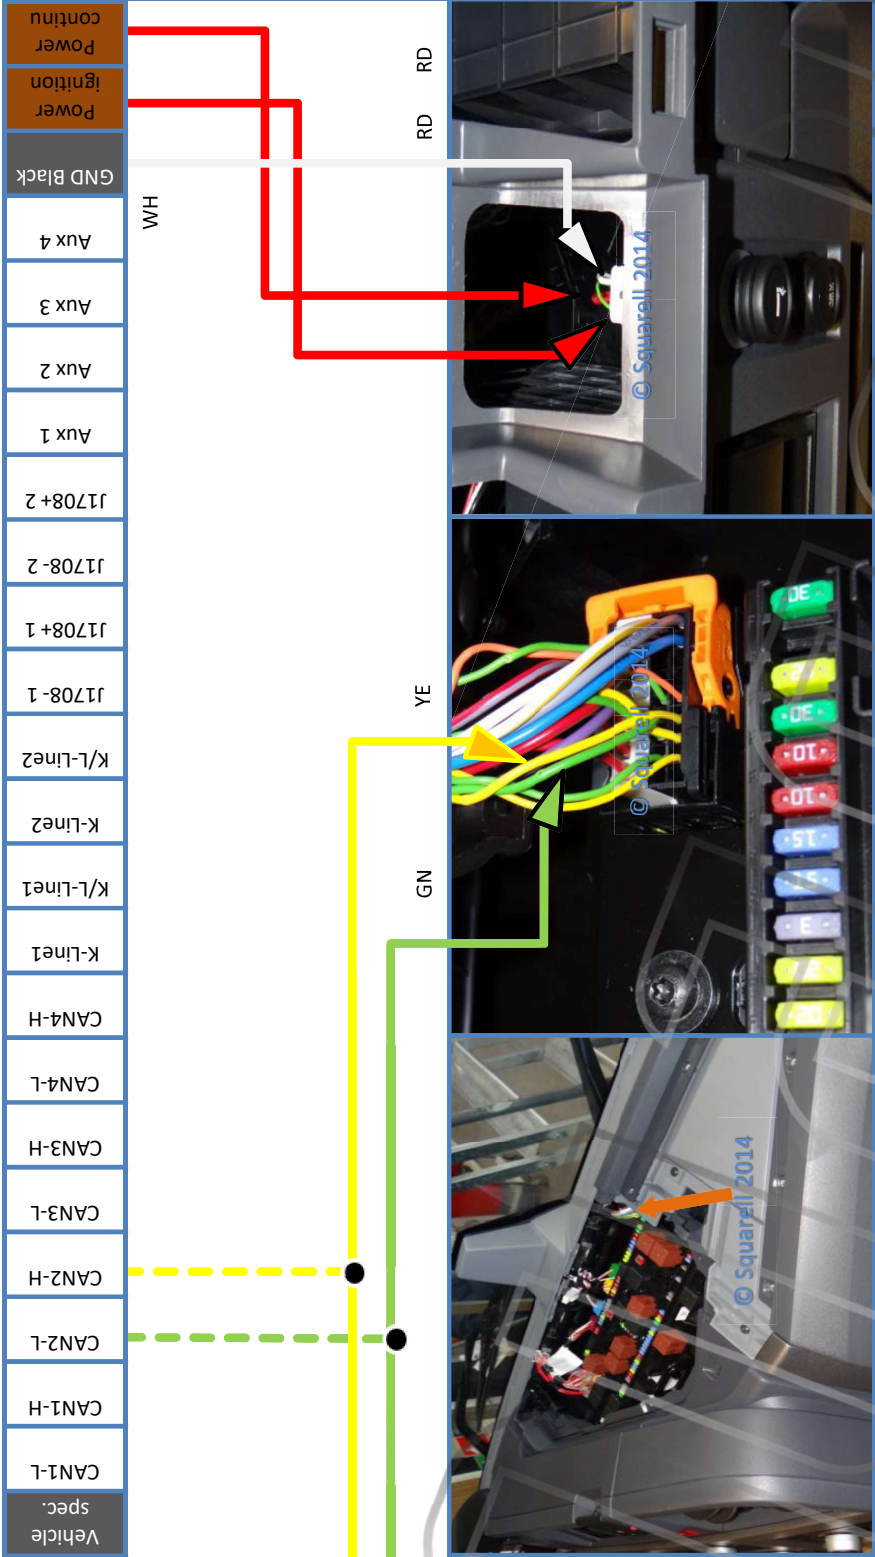

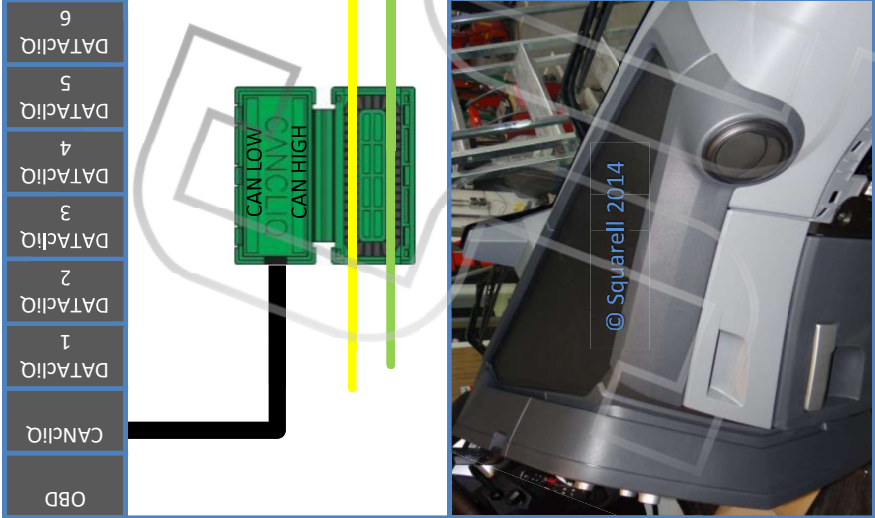

Location

Middle Console under the rubber cover, you will find the Fuse box. Open the Fuse box cover with the 2 clips.

Find the black and white connector with the orange brace at the top right side of the fuse box.(orange arrow)

CANbus

Untwist Yellow and green wires, **2nd Pair from the left** in the connector!
Place Green wire in CAN Low slot
Place Yellow wire in CAN High slot
Close CANcliQ.

Power + Ground

Several options



Ground (KL31) :
Terminal as in picture (White arrow)

Continuous Power (KL30) :
Terminal as in picture (Red arrow)
Power supply

Power on Ignition (KL15) :
Terminal as in picture (Red arrow)
Cigarette lighter


Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. This vehicle type is not supporting the Total Fuel Used, the Fuel Level on the Direct CANbus. Squarell unit will start counting the Total Fuel Used since the installation.



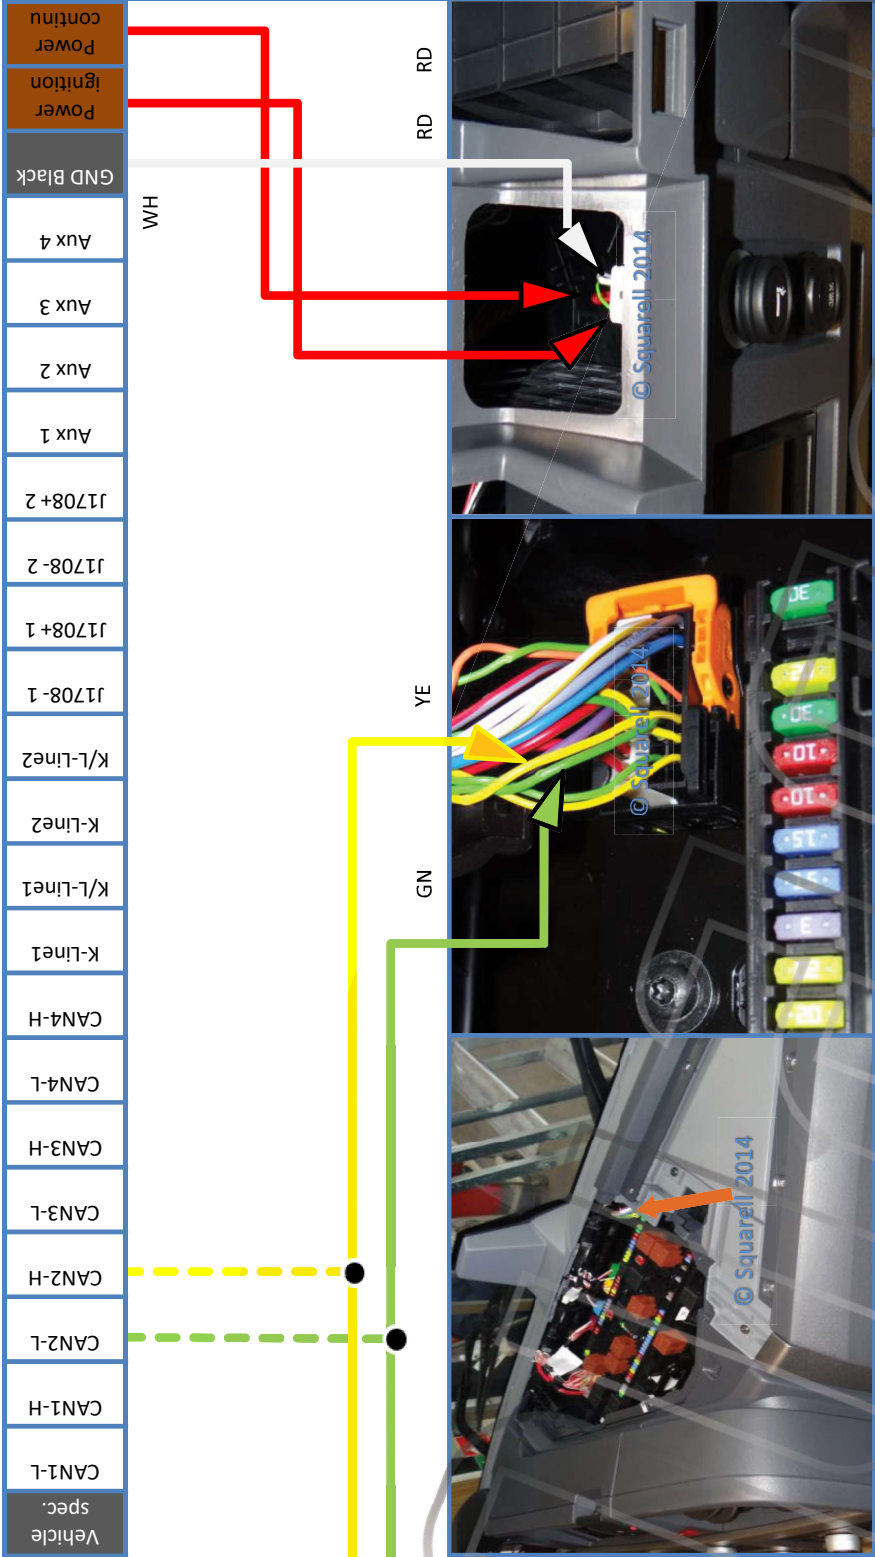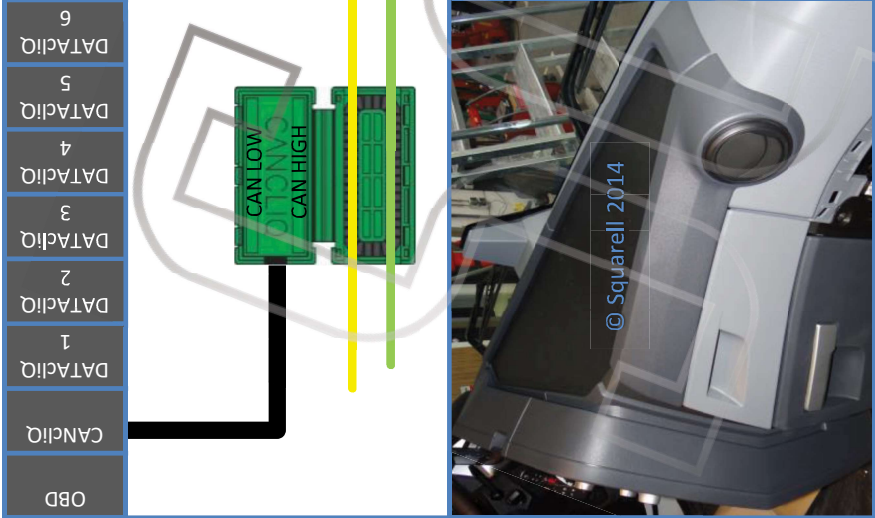


Location

Middle Console under the rubber cover, you will find the Fuse box. Open the Fuse box cover with the 2 clips.

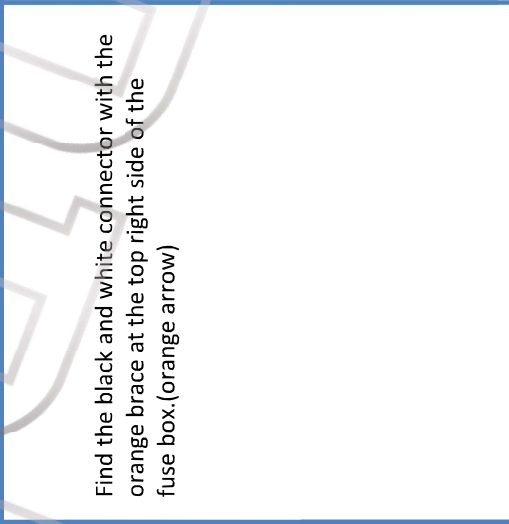

CANbus

Untwist Yellow and green wires, **2nd Pair from the left** in the connector!
Place Green wire in CAN Low slot
Place Yellow wire in CAN High slot
Close CANclIQ.

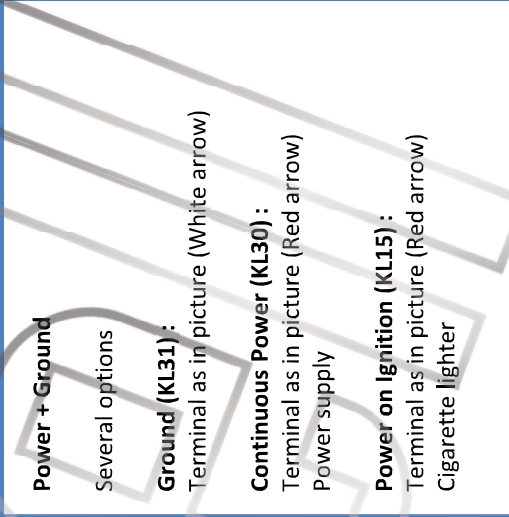

Power + Ground
Several options




Ground (KL31) :
Terminal as in picture (White arrow)


Continuous Power (KL30) :
Terminal as in picture (Red arrow)
Power supply

Power on Ignition (KL15) :
Terminal as in picture (Red arrow)
Cigarette lighter

Warning! CANclIQ or DataClIQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. This vehicle type is not supporting the Total Fuel Used, the Fuel Level on the Direct CANbus. Squarell unit will start counting the Total Fuel Used since the installation.

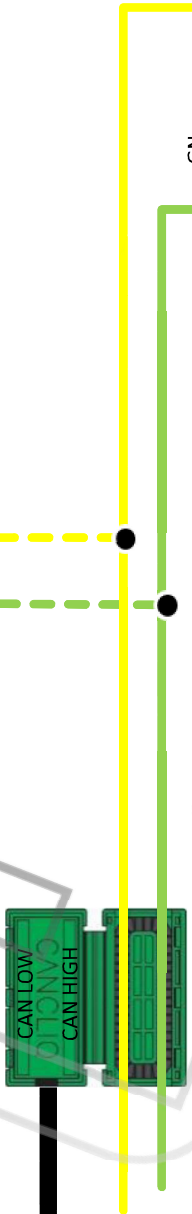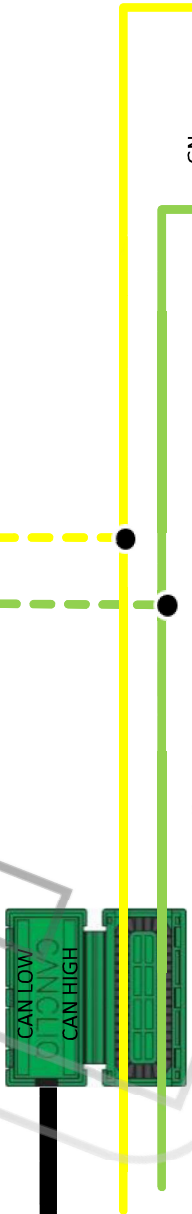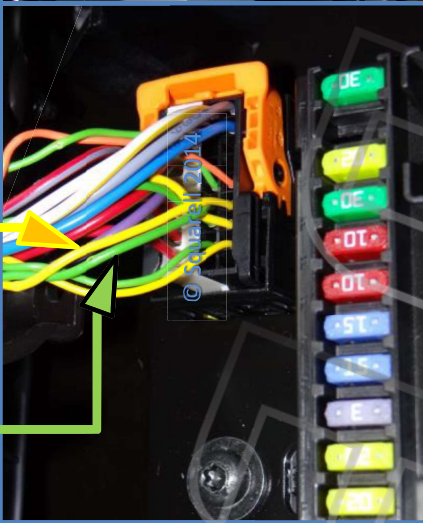


Obd	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power continu												
  																																									
Location Middle Console under the rubber cover, you will find the fuse box. Open the Fuse box cover with the 2 clips.		 © Squarell 2014										 © Squarell 2014										 © Squarell 2014										 © Squarell 2014									
Power + Ground Several options Ground (KL31) : Terminal as in picture (White arrow) Continuous Power (KL30) : Terminal as in picture (Red arrow) Power supply Power on Ignition (KL15) : Terminal as in picture (Red arrow) Cigarette lighter		CANbus Untwist Yellow and green wires, 2nd Pair from the left in the connector! Place Green wire in CAN Low slot Place Yellow wire in CAN High slot Close CANcliQ.																																							
Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. <i>This vehicle type is not supporting the Total Fuel Used, the Fuel Level on the Direct CANbus. Squarell unit will start counting the Total Fuel Used since the installation.</i>																																									

 

Renault Magnum DXI Euro 4,5,EEV 2006-2013																										
<																										



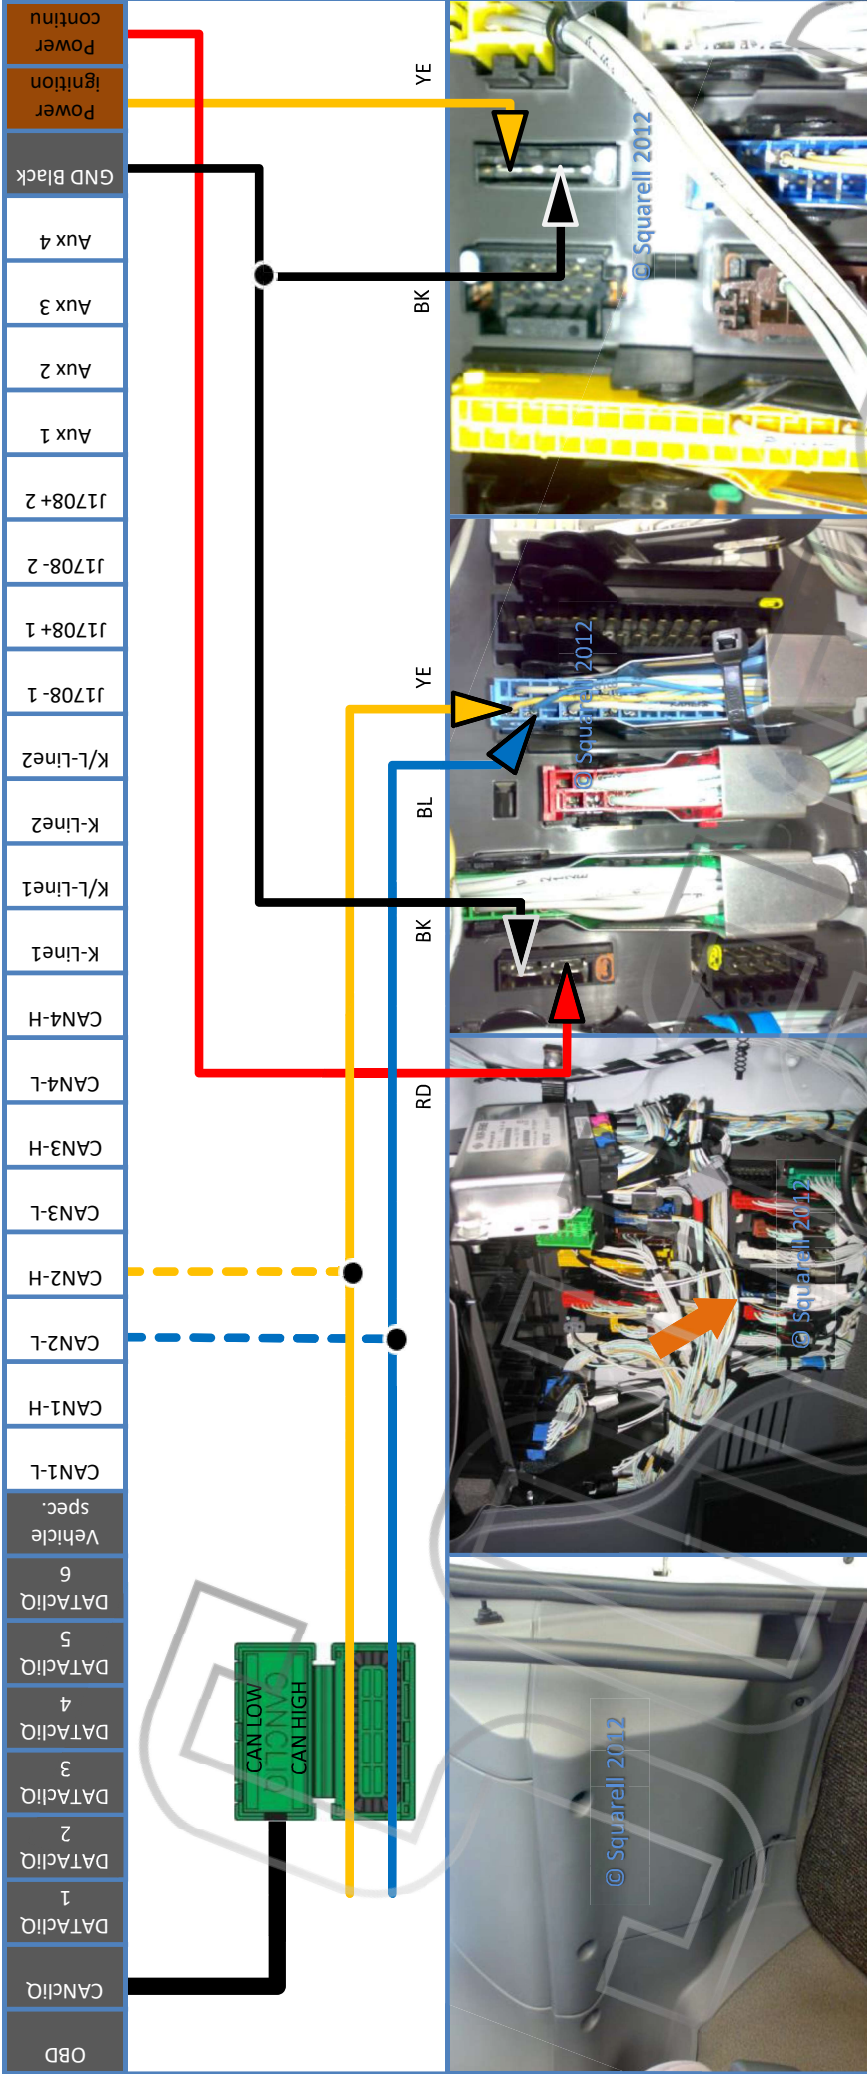

Location

At passenger side
Open 2 locks, remove dashboard cap
Remove lower dashboard panel

CANbus

Untwist Blue and Yellow wires,
Place Blue wire in CAN Low slot
Place Yellow wire in CAN High slot
Close CANdiQ.



Power + Ground

Connections on connector panel

Ground (KL31) :	
Terminal as in picture (Black arrow)	
Continuous Power (KL30) :	
Terminal as in picture (Red arrow)	
Power on Ignition (KL15) :	
Terminal as in picture (Yellow arrow)	


Warning! CANciQ or DataciQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires.



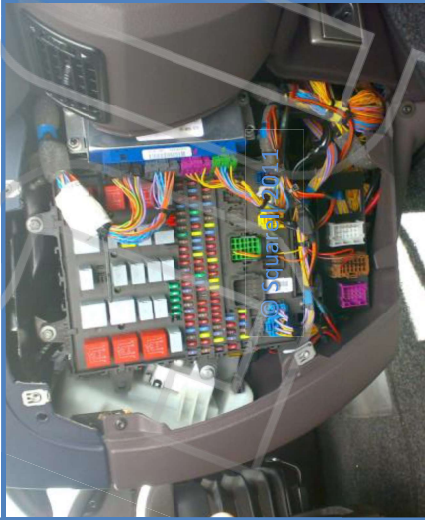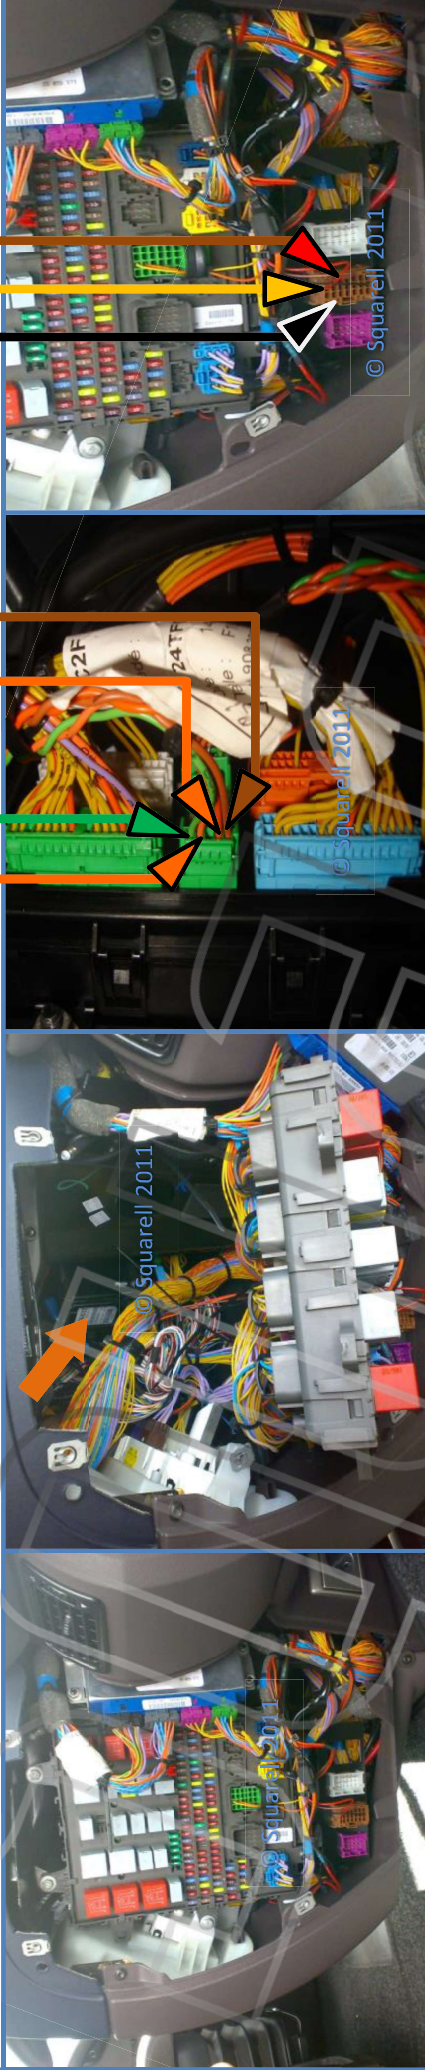

Pin 2 (Yellow arrow)








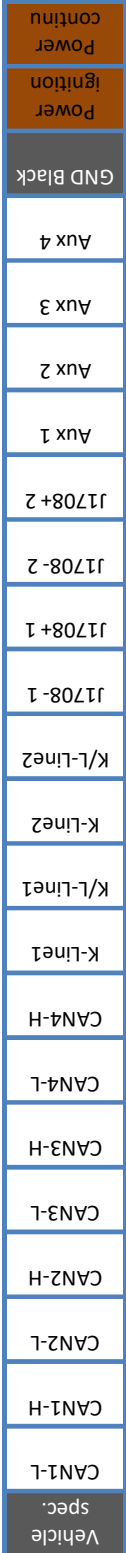


Obd	CancliQ	DatacliQ 1	DatacliQ 2	DatacliQ 3	DatacliQ 4	DatacliQ 5	DatacliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K-Line1	K/L-Line1	K-Line2	K/L-Line2	J1708-1	J1708-1	J1708-2	J1708-2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power continu
Location At passenger side Open 2 locks, remove dashboard cap Remove lower dashboard panel																															
VECU on left side of fuse box. (orange arrow) CANbus Untwist 2 Yellow wires, Place the Yellow wires in CANcliQ as given in the picture. Close CANcliQ.																															
Power + Ground Connections by fuse box Ground (KL31) : Terminal as in picture (Black arrow) Continuous Power (KL30) : Terminal as in picture (Red arrow) Power on Ignition (KL15) :																															
Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. This vehicle type is not supporting the Total Fuel Used, the Fuel Level on the Direct CANbus. Squarell unit will start counting the Total Fuel Used since the installation.																															



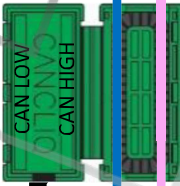
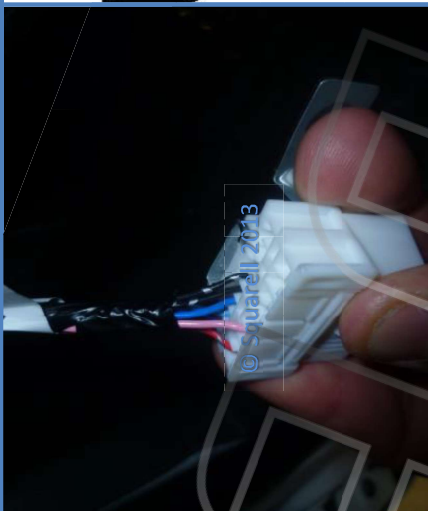
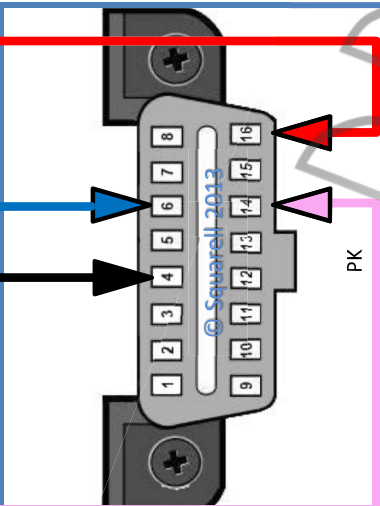
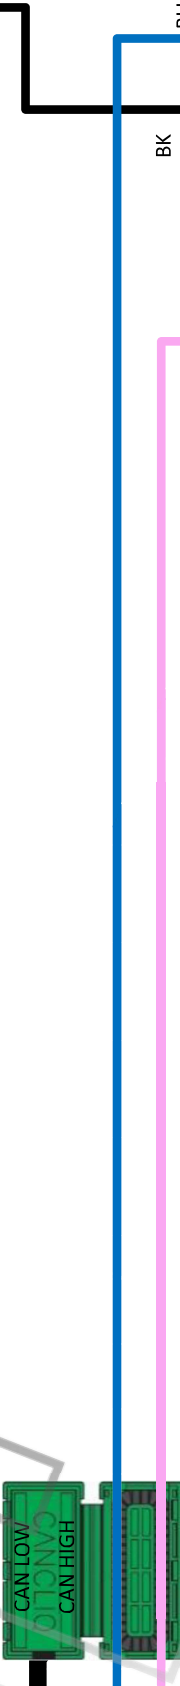
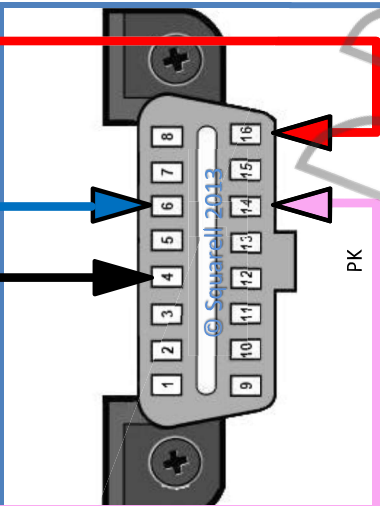


Renault D 2m cab 2013+																											A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K-Line1	K/L-Line1	K-Line2	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power continu																					
														Location At Driver side, under the dashboard on left		CANbus Untwist wires at backside of the OBD connector (pin 6 & 14) Place Blue wire in CAN High Place Pink wire in CAN Low Close CANcliQ.		Power + Ground Connections at backside of the OBD connector. Ground (KL31) : OBD Connector pin 4 and pin 5 (Black arrow). Continuous Power (KL30) : OBD Connector pin 16 (Red arrow).																																		
Warning! CANcliQ closes only once. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. Warning! To receive the Engine Speed parameter, you have to connect to OBD connector wire to wire instead of CANcliQ.																																																				

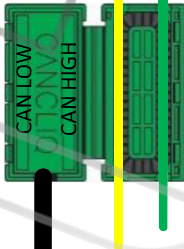Obd	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K-Line1	K/L-Line1	K-Line2	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power continu																																																																										
																																																																																																									

Renault D Wide (DTI 8,11) Euro 6 2013-2021																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																					
OBD		CANcliQ		DATAcliQ 1		DATAcliQ 2		DATAcliQ 3		DATAcliQ 4		DATAcliQ 5		DATAcliQ 6		Vehicle spec.		CAN1-L		CAN1-H		CAN2-L		CAN2-H		CAN3-L		CAN3-H		CAN4-L		CAN4-H		K-Line1		K/L-Line1		K-Line2		K/L-Line2		J1708-1		J1708+1		J1708-2		J1708+2		Aux 1		Aux 2		Aux 3		Aux 4		GND Black		Power Ignition		Power continu																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																							
																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																				</	

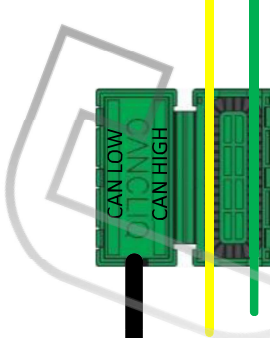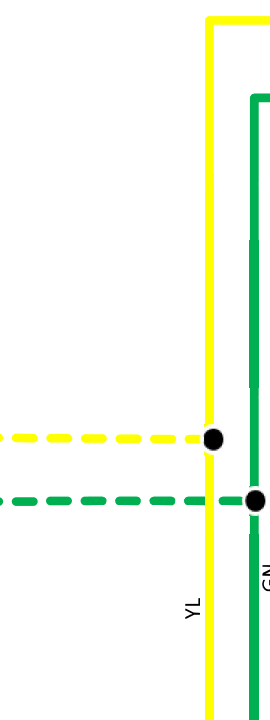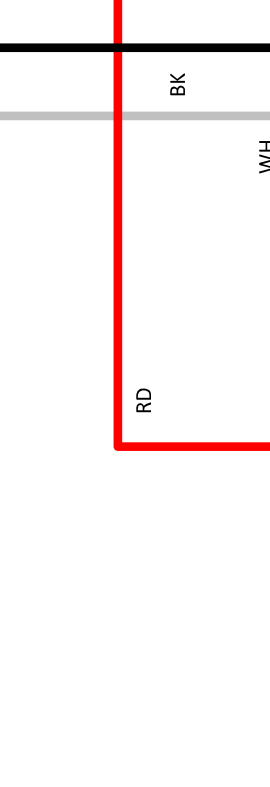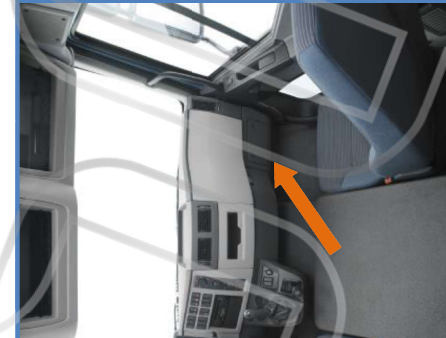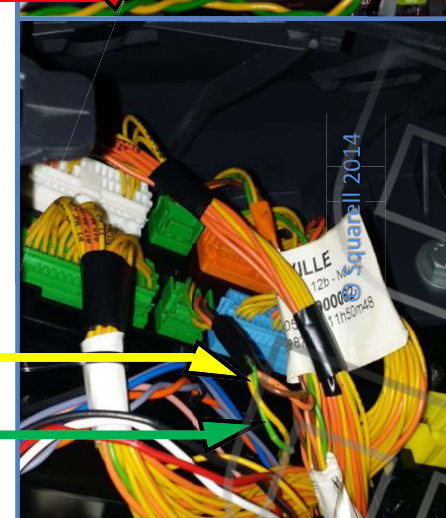

Renault D Acces (DTI 8) Euro 6 2013-2021																																							
																																							
																																							
Location At the passenger side open up the cover with 2 plastic clips.										CANbus Untwist the Yellow and Green wire from the 4 pin connector between the green and blue connector. Place the Yellow wire in the CAN High slot. Place the Green wire in the CAN low slot. Close the CANcliQ properly.										Power + Ground Ground (KL31) : White wire (White arrow). Continuous Power (KL30) : Red wire(Red arrow). Power on Ignition (KL15) : Black wire (Black arrow).																			
Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.																																							



