


Isuzu FSR - Euro 5




Location

Open the dashboard so you can turn the clock unit forward.

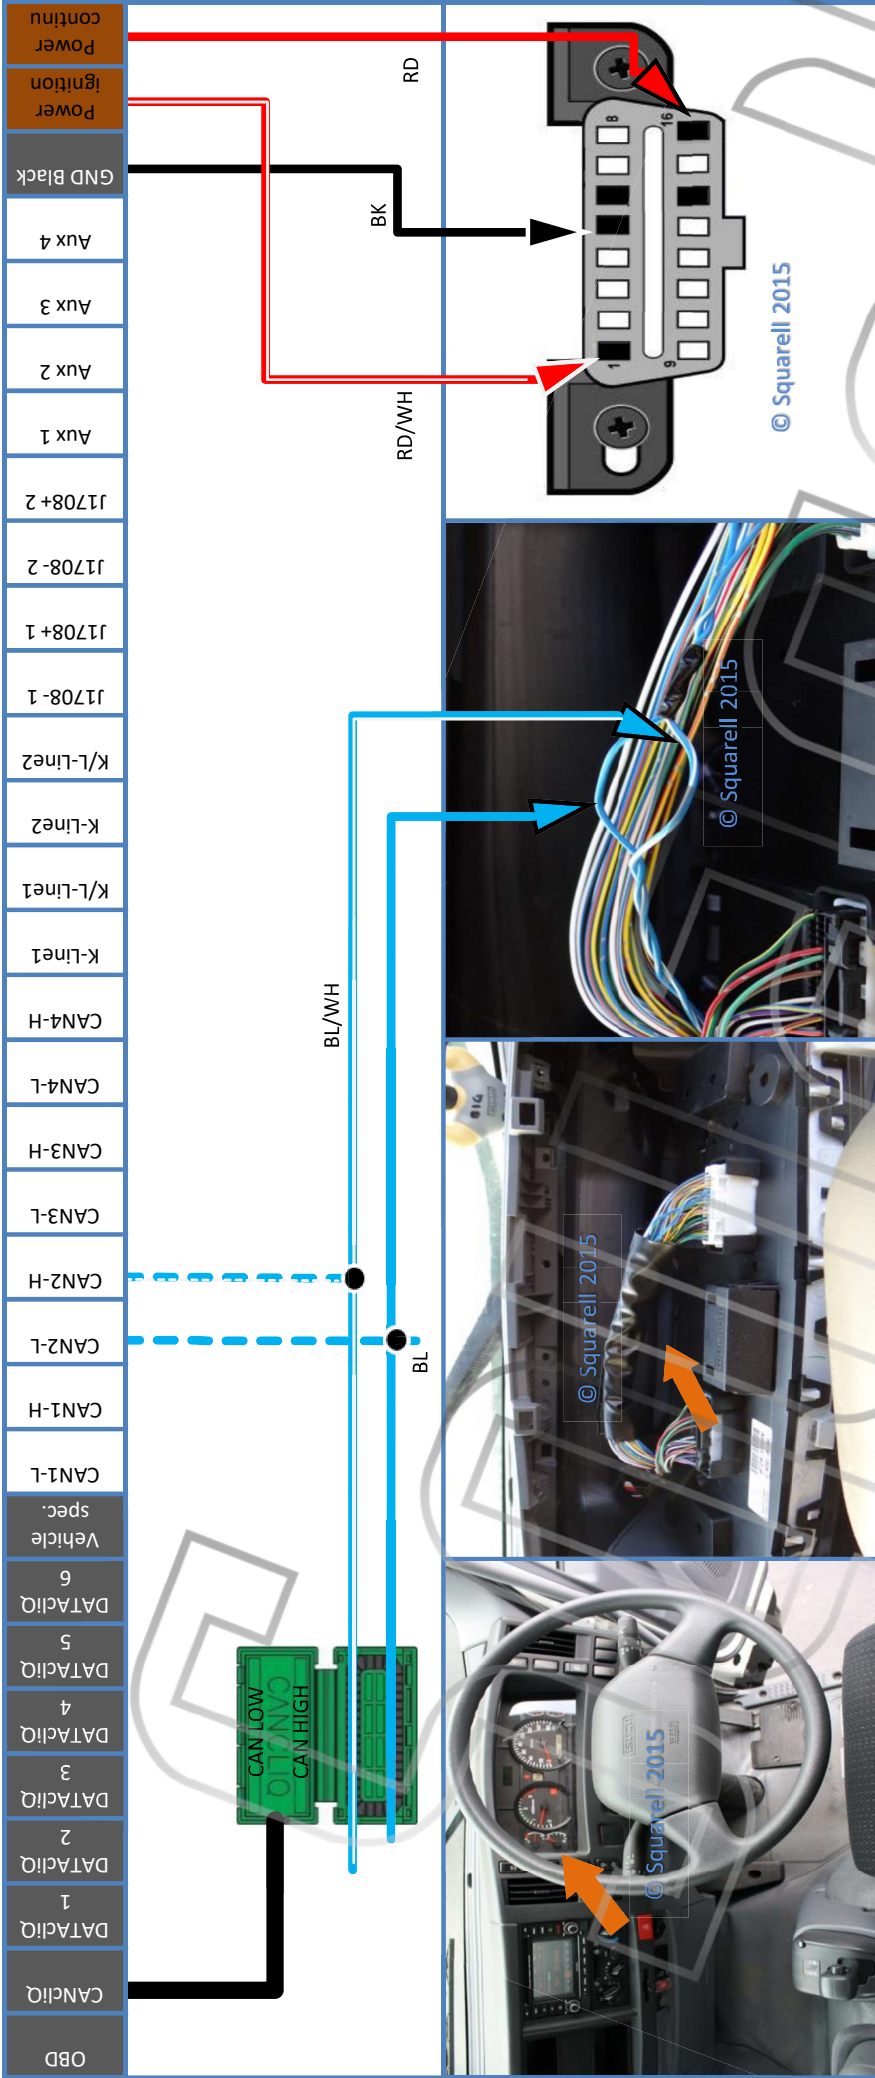

CANbus

Untwist the Blue/White and Blue wires from the CAN distribution block at the backside of the Clock unit
Place Blue/White wire in CAN High slot.
Place Blue wire in CAN Low slot.
Close CANClQ.

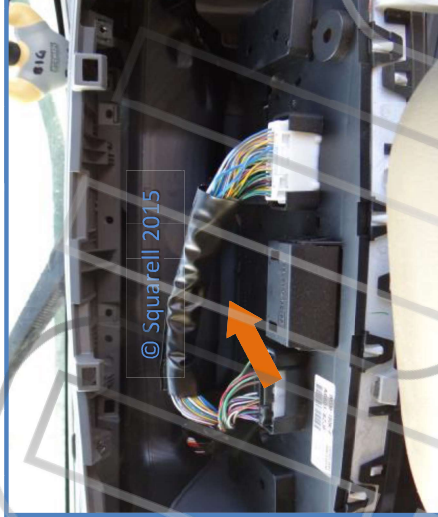

When the clock unit is turned forward You see the wire loom covered with black Velcro tape. Release this and find the Blue/White & Blue twisted wires.

Power + Ground

Connections at backside of OBD Connector.

Ground (KL31):


OBD Connector pin 4 & 5 (Black arrow).

Continuous Power (KL30):

OBD Connector pin 16 (Red arrow).

Power on Ignition (KL15) :

OBD Connector pin 9 (RED/White arrow).

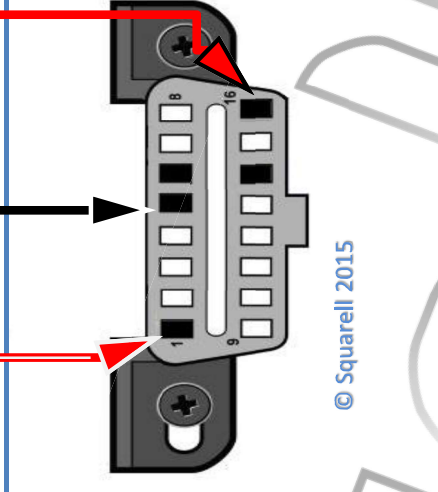

Warning: CANCELIQ or DataCIIQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.



A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

B

