

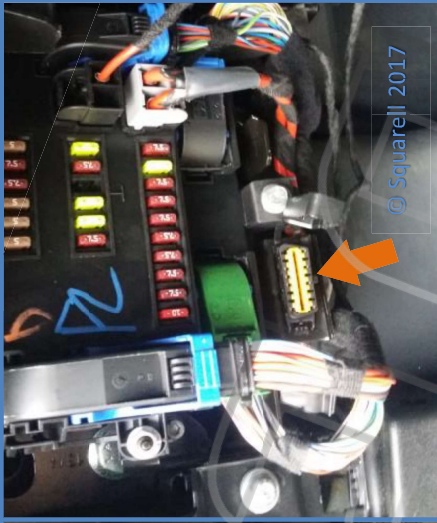
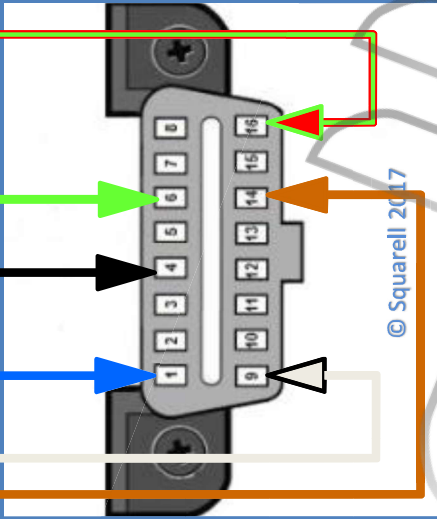
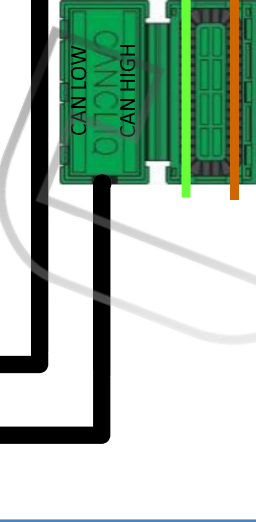
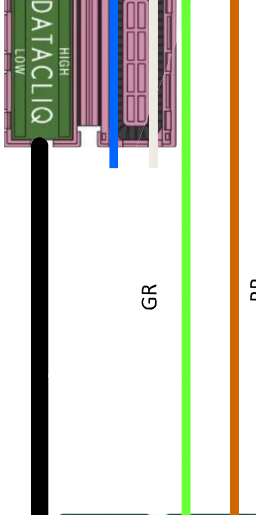
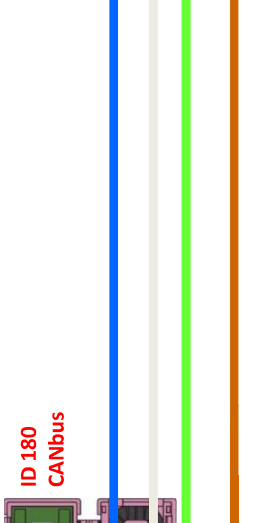
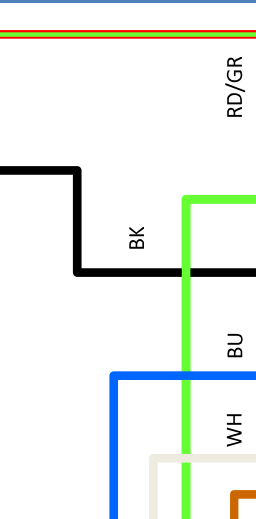
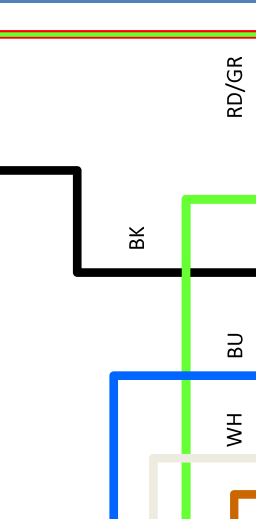
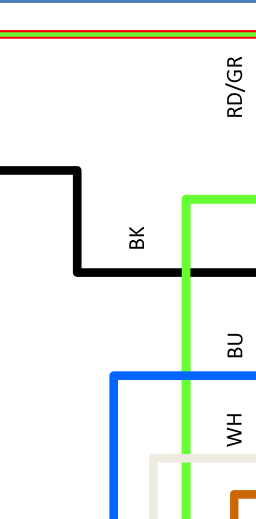
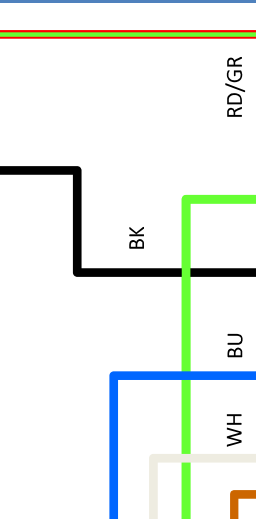
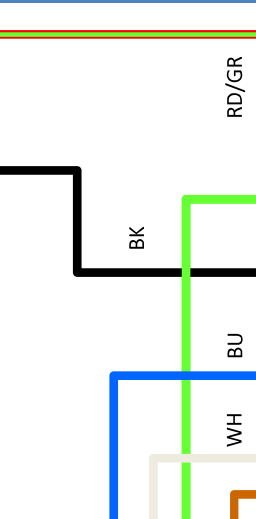
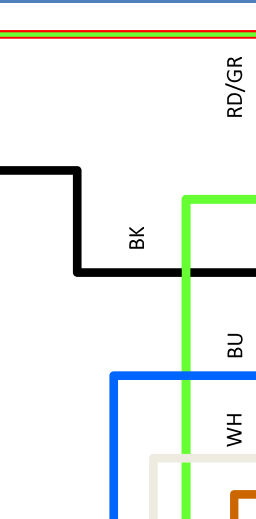
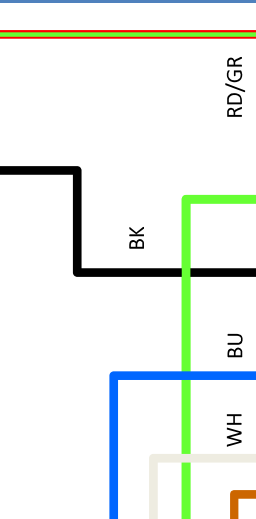
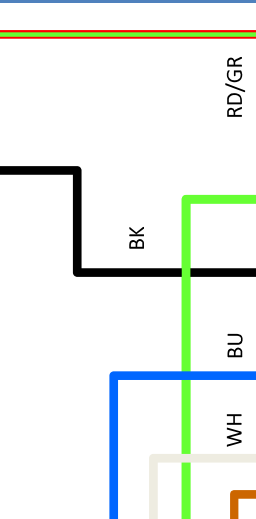
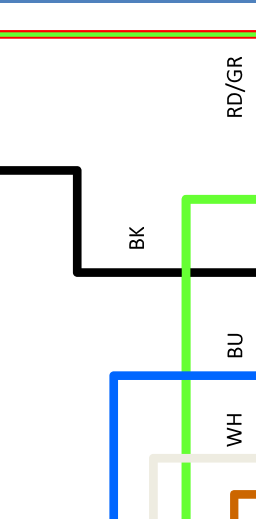
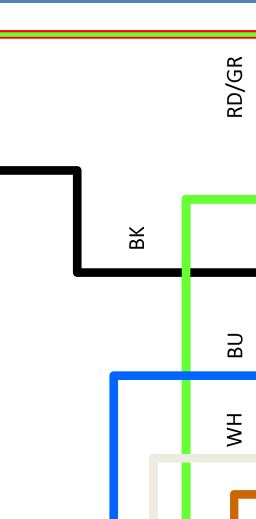
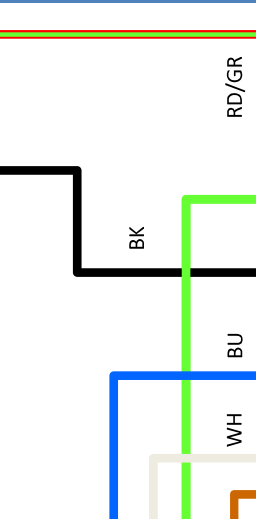
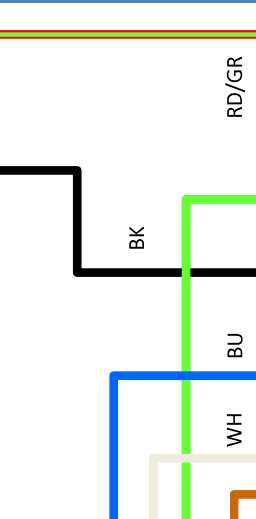
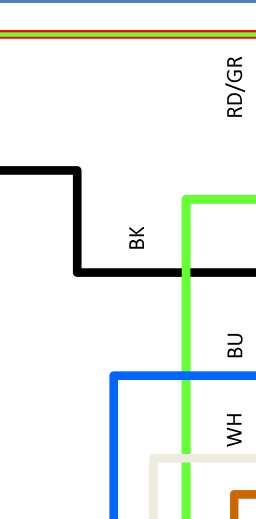
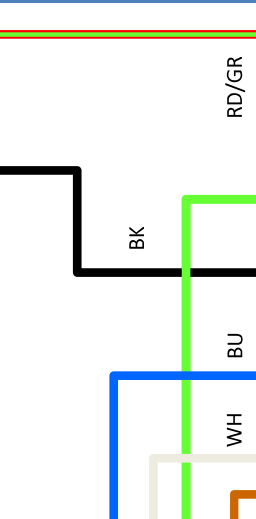
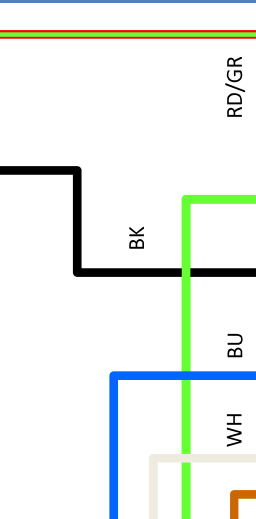
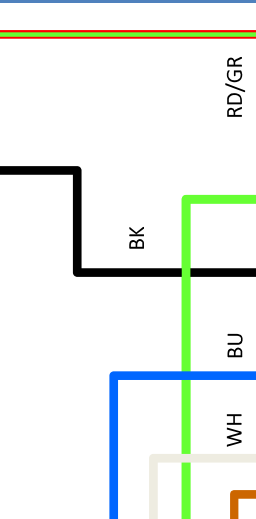
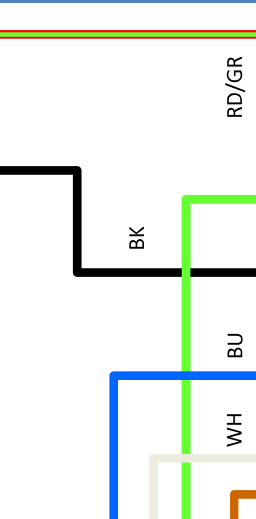
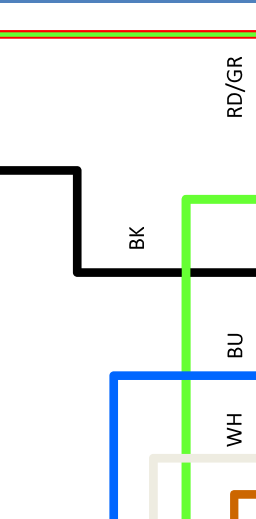
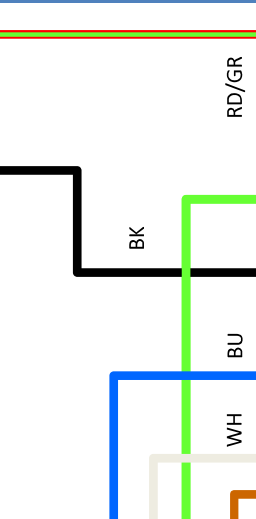
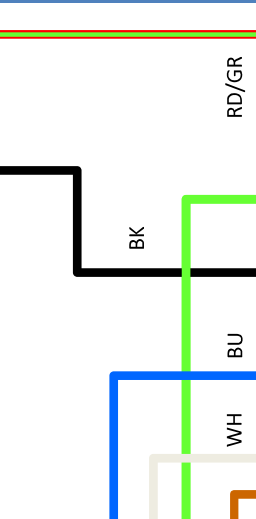
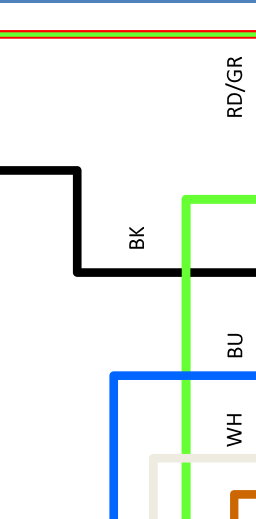
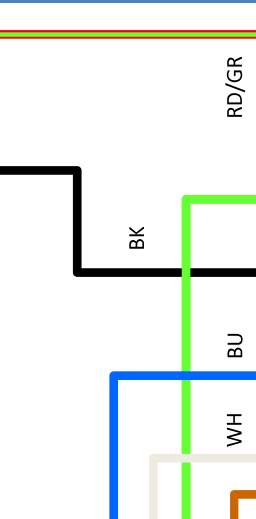
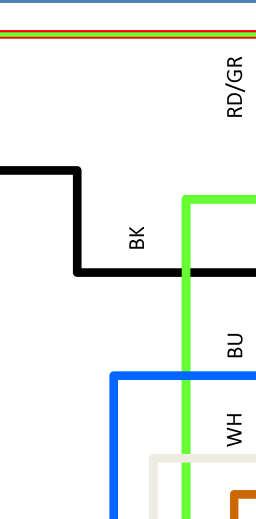
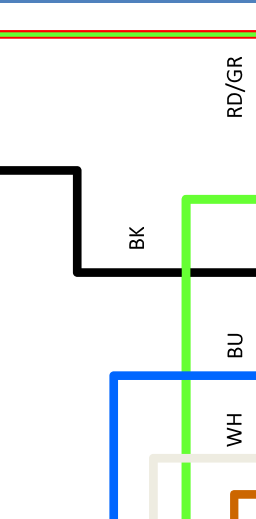
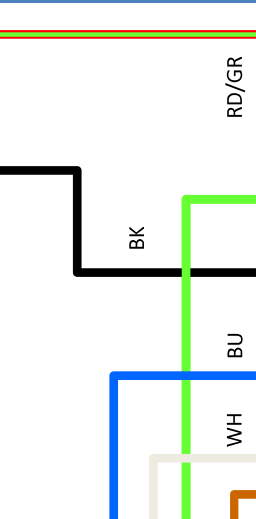
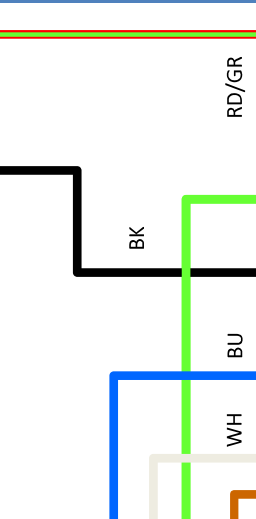
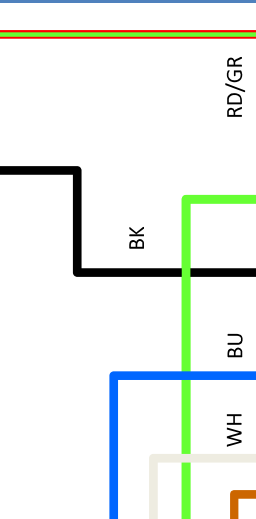
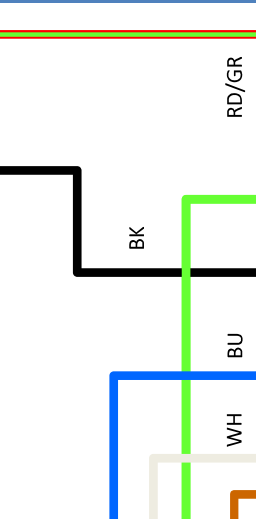
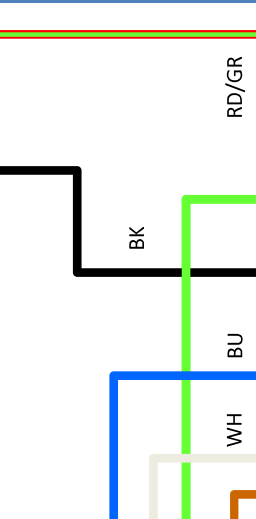
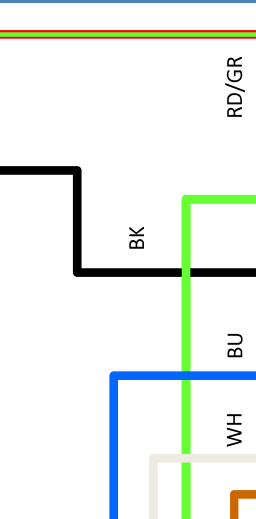
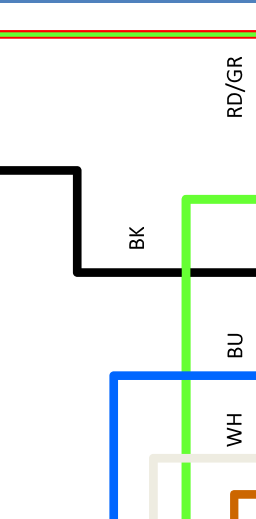
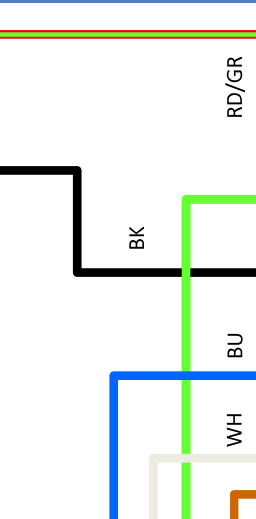
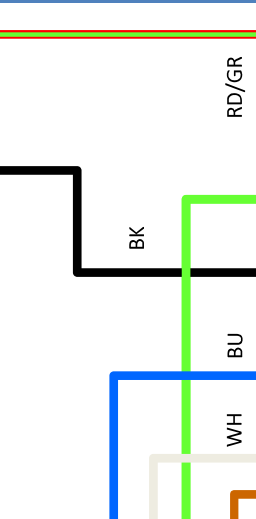
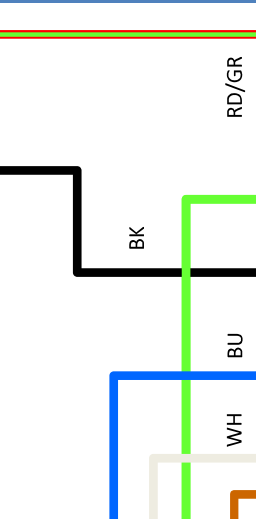
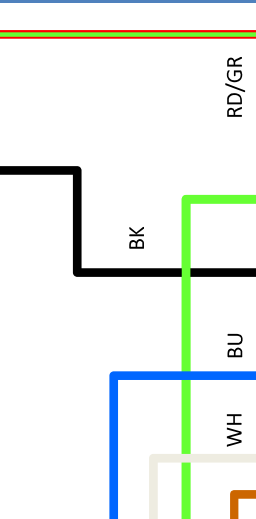
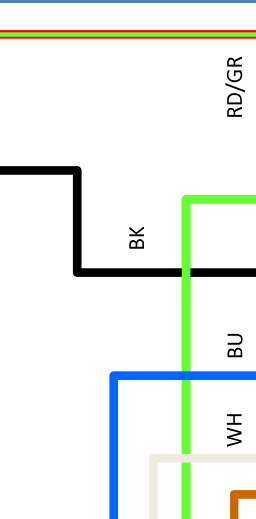
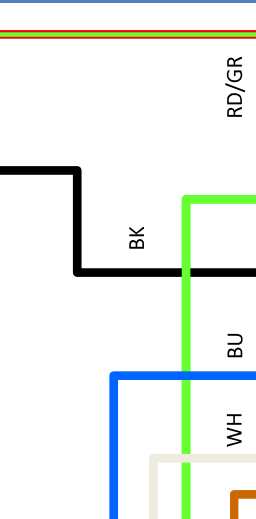
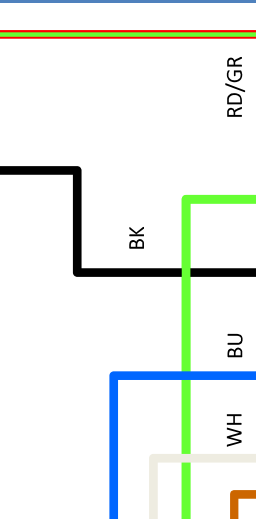
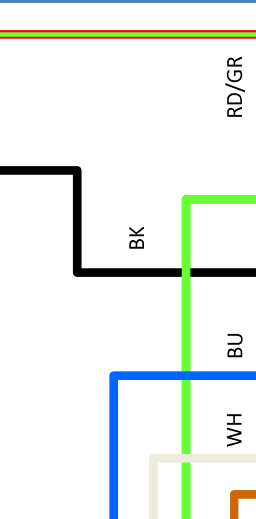
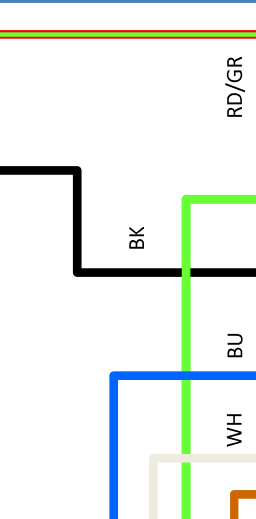
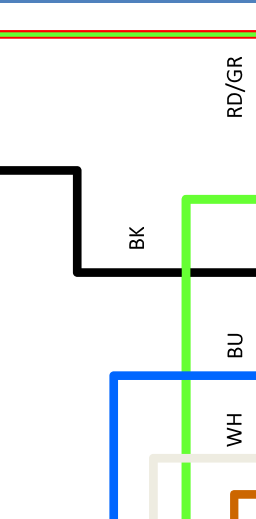
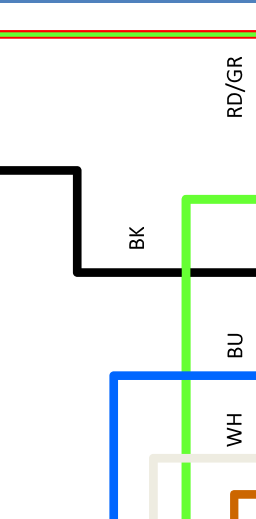
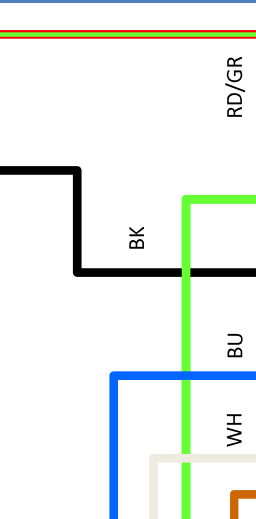
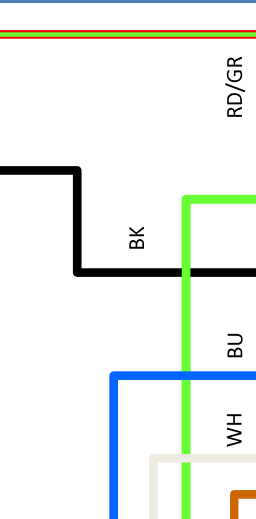
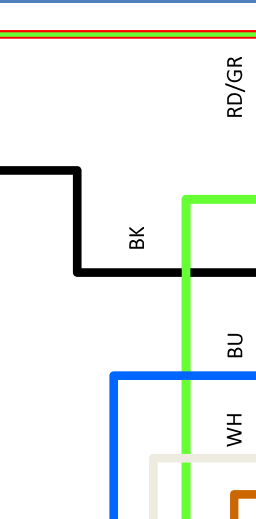
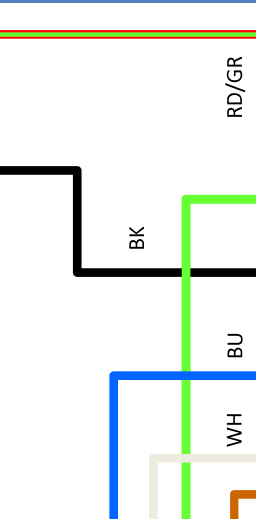
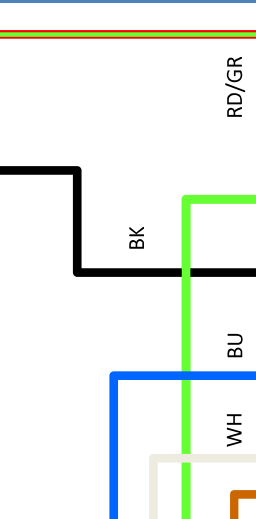
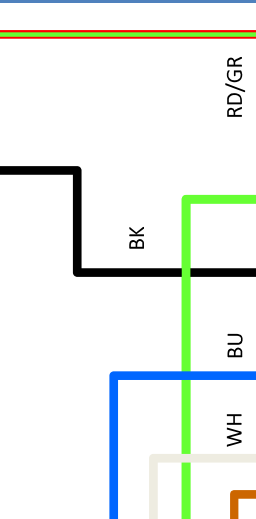
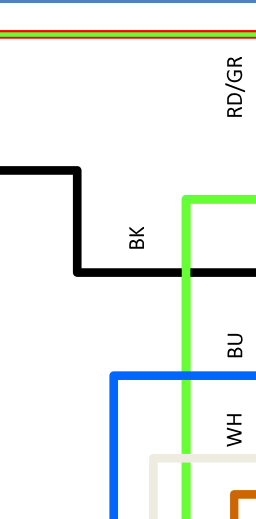
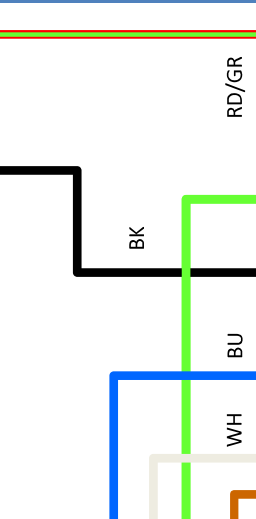
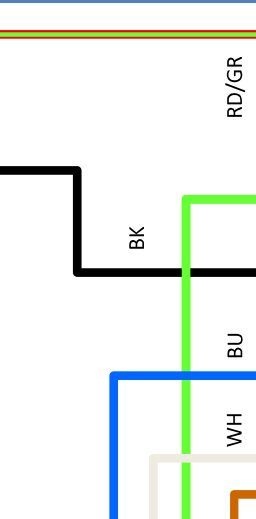
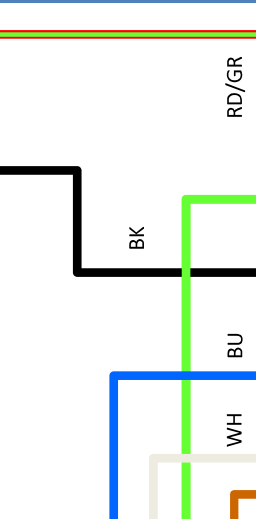
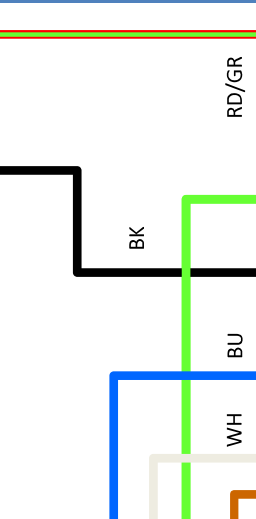
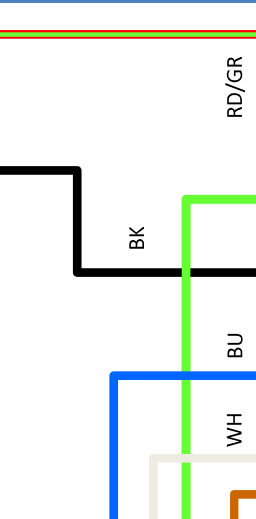
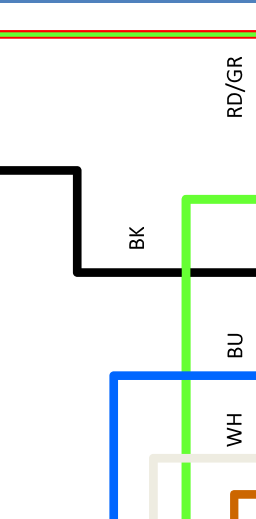
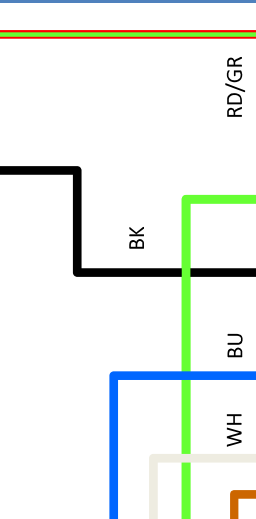
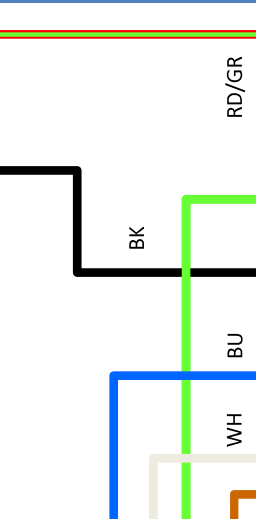
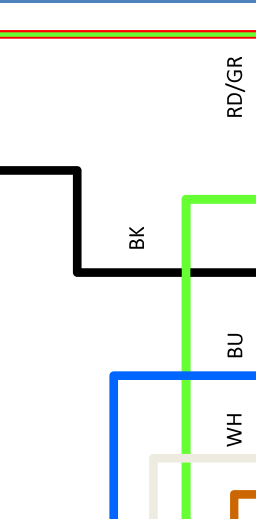
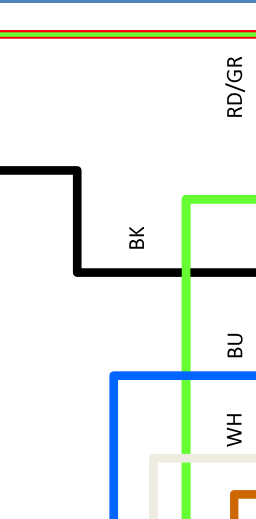
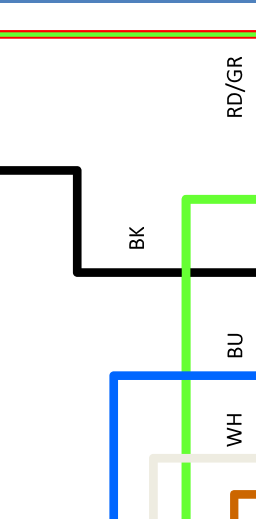
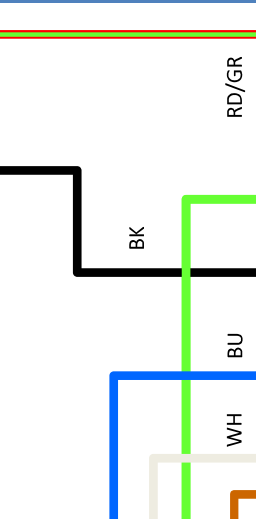
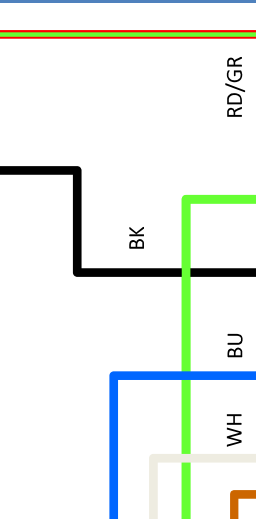
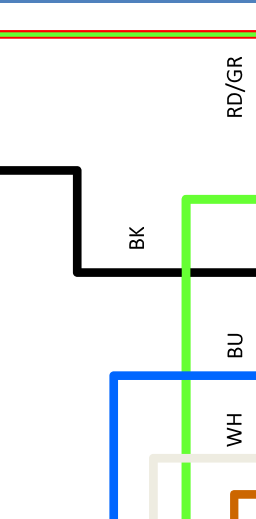
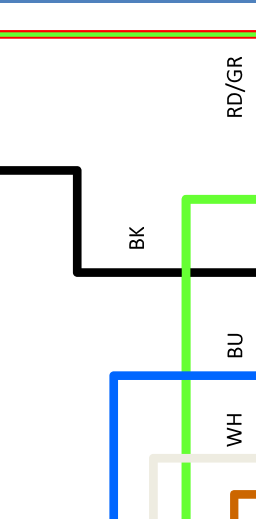


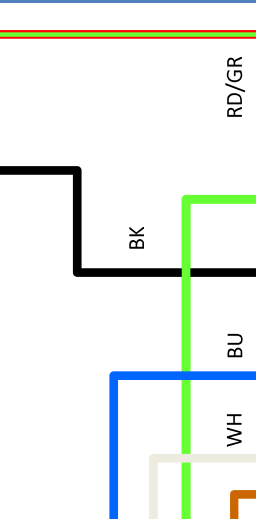


Free Terminal (Grey/Red arrow)

Version 24102013 ENG
Copyright © Squarell 2013

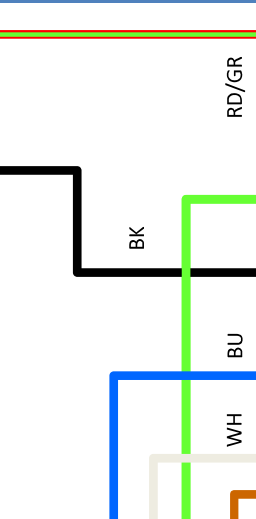

OBD										CANcliQ										DATAcliQ 1										DATAcliQ 2										DATAcliQ 3										DATAcliQ 4										DATAcliQ 5										DATAcliQ 6										Vehicle spec.												CAN1-L												CAN1-H												CAN2-L												CAN2-H												CAN3-L												CAN3-H												CAN4-L												CAN4-H												K/L-Line1														K/L-Line2														J1708-1														J1708-2														J1708+2														Aux 1														Aux 2														Aux 3														Aux 4														GND Black																Power Ignition																Power continu																																																																																																																																																																																																																																																																																																																																																																																																									
																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			

Peugeot Expert (3rd gen) 2016+

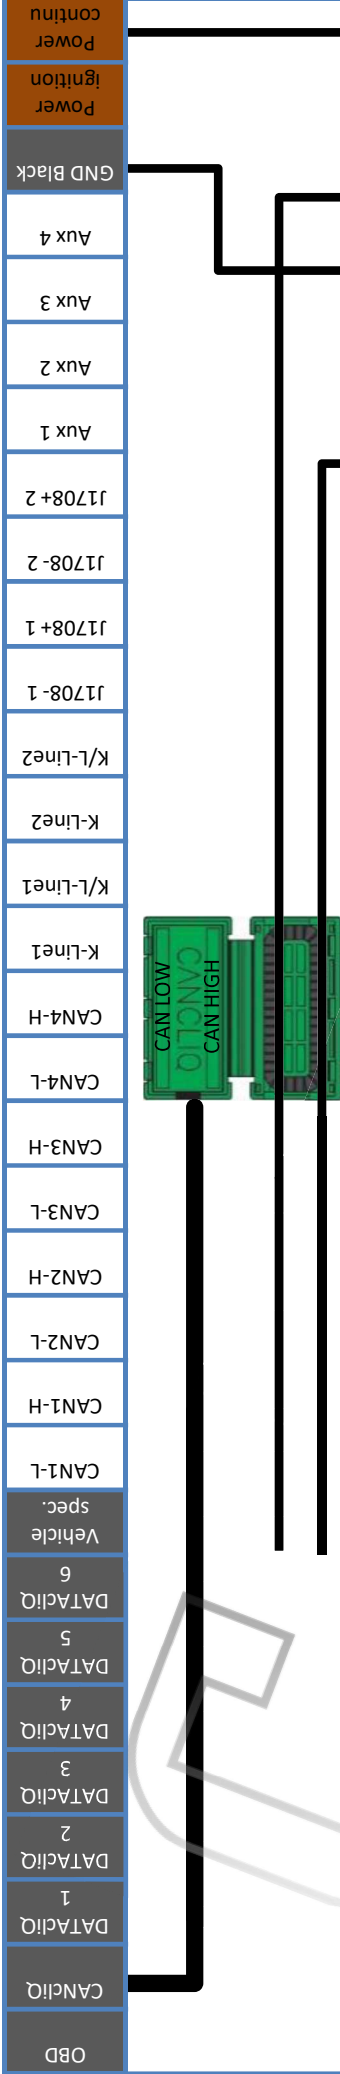

© Squarell 2017

Location

Find the OBD connector at the driver side.
Located behind the lower dashboard panel.



© Squarell 2017


CANbus

Untwist the pin 6 Blue and pin 14 Pink wires.

Place the Blue wire from pin 6 in the CAN High Slot.

Place the Pink wire from pin 14 in the CAN Low slot.

Close CANcliQ.

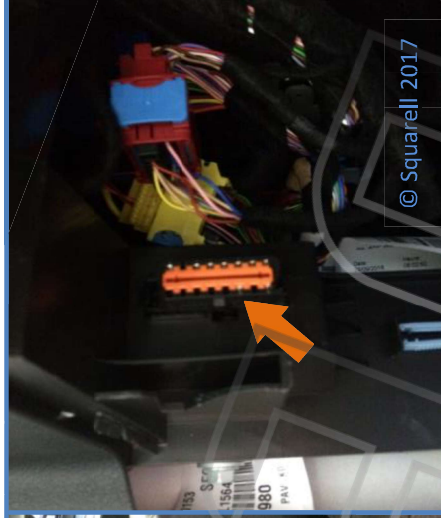

© Squarell 2017

Power + Ground


Connections in OBD connector

Ground (KL31):

OBD connector pin 4 Black wire and pin 5

Continuous Power (KL30) :






Pin 16 White wire OBD connector

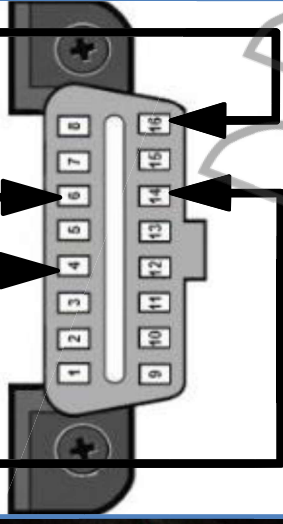


© Squarell 2017

Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.

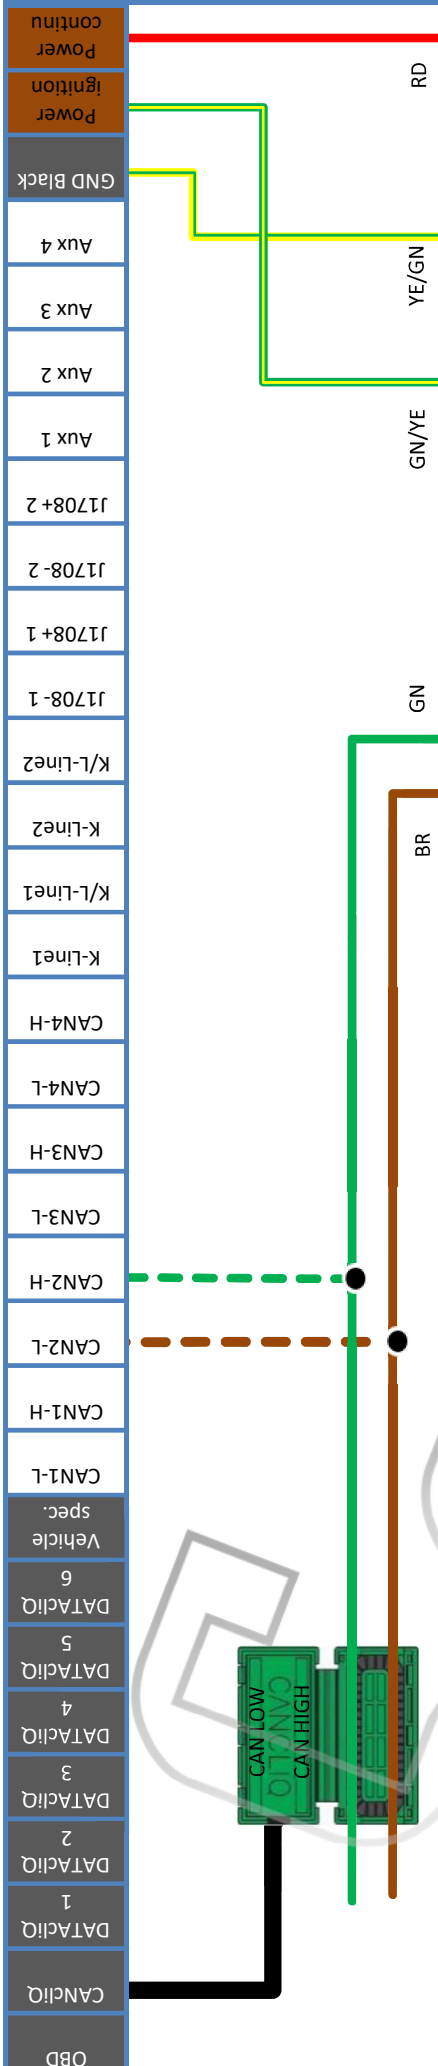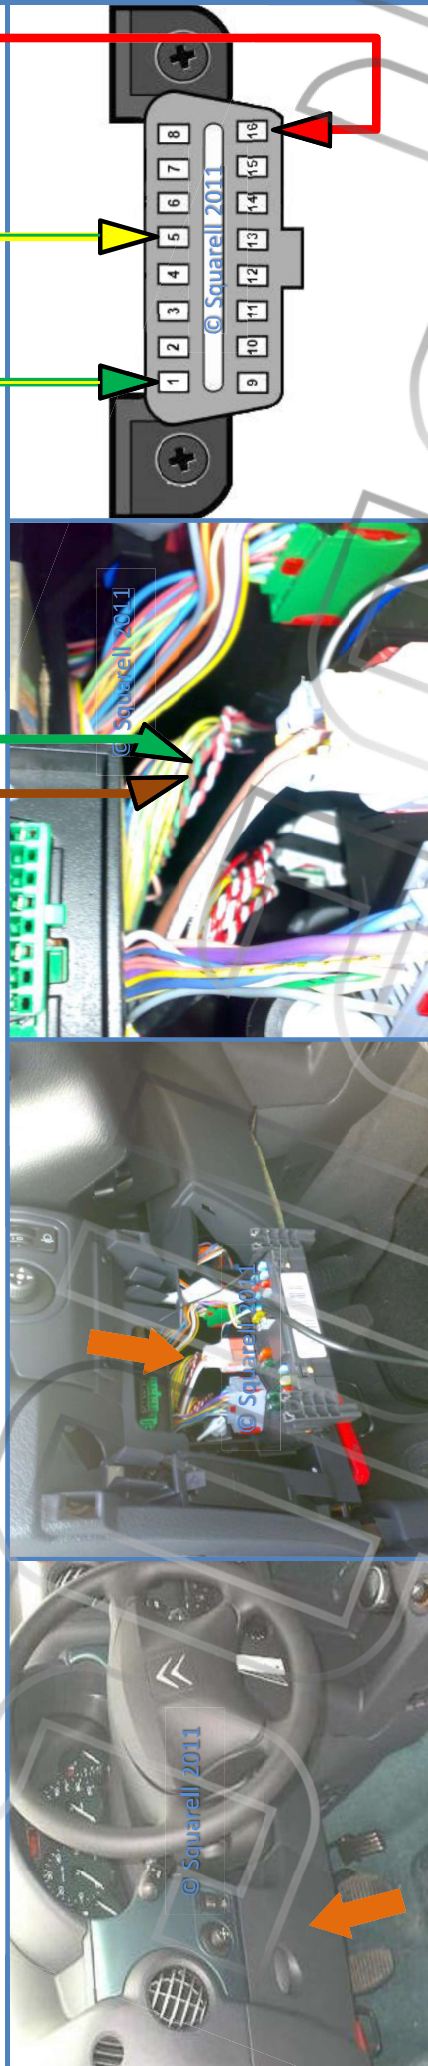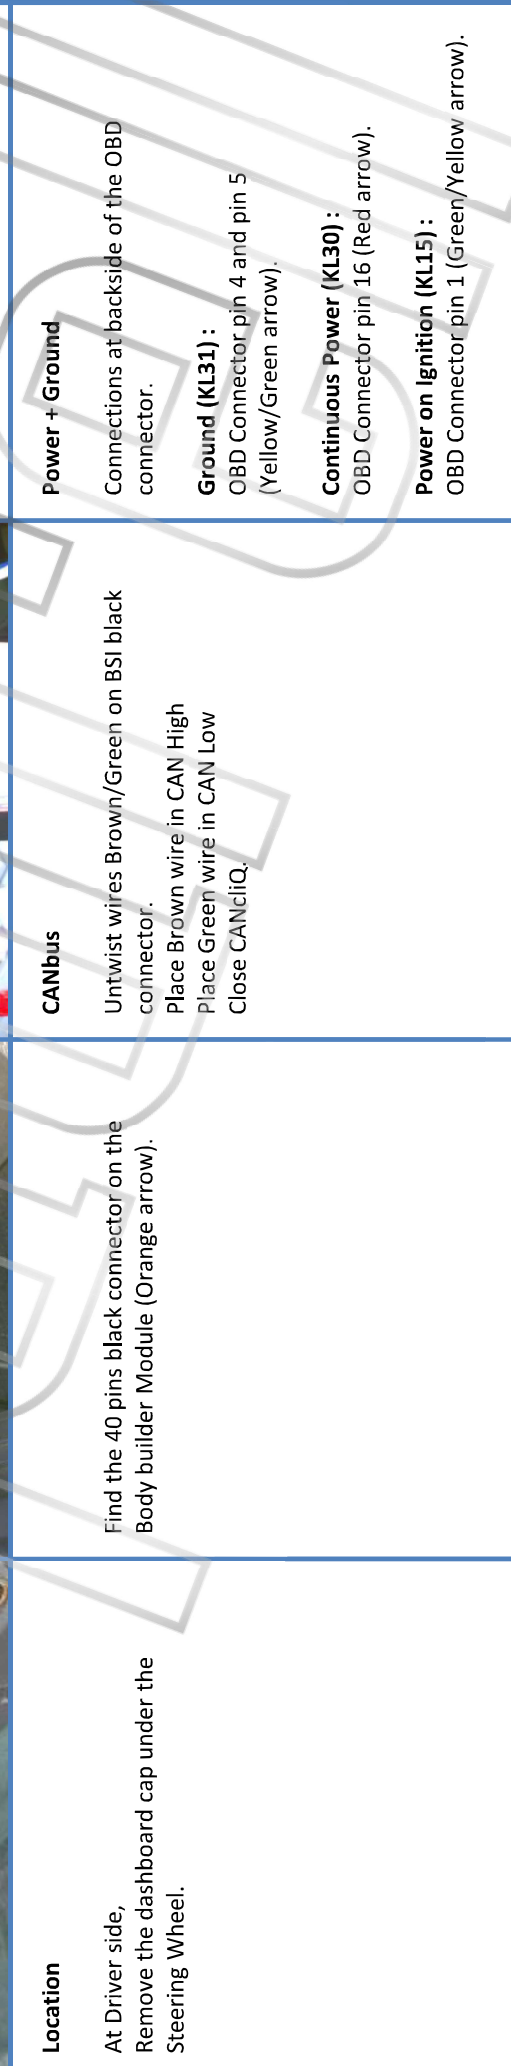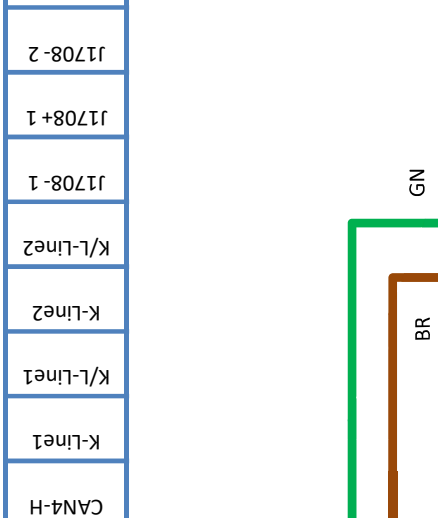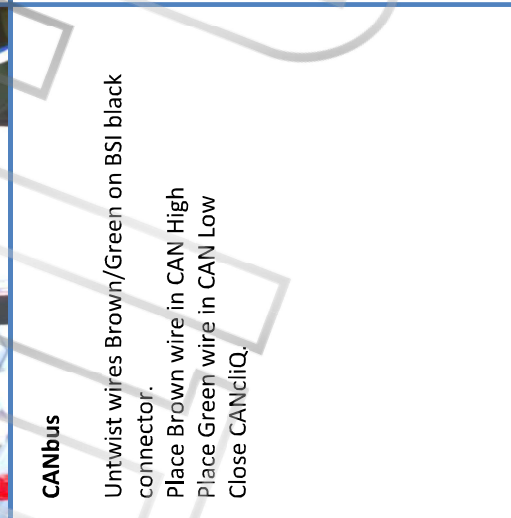

OBD										CANcliQ										DATAcliQ 1										DATAcliQ 2										DATAcliQ 3										DATAcliQ 4										DATAcliQ 5										DATAcliQ 6										Vehicle spec.												CAN1-L												CAN1-H												CAN2-L														CAN2-H												CAN3-L														CAN3-H														CAN4-L														CAN4-H														K/L-Line1																K/L-Line2																J1708-1																J1708+1																J1708-2																J1708+2																Aux 1																Aux 2																Aux 3																Aux 4																GND Black																Power Ignition																Power continu															
																																																																																																																																																																																																																																																																																																																																																																																																																					
																																																																																																																																																																																																																																																																																																																																																																																																																					

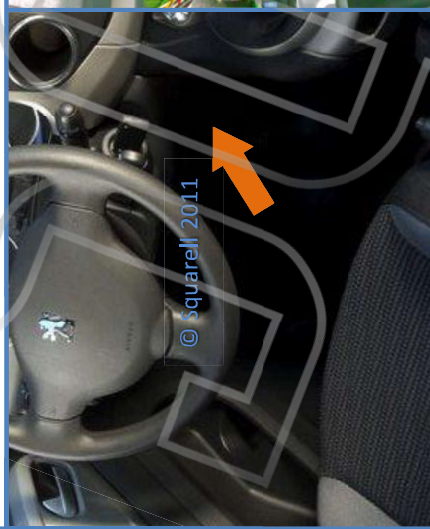

At Driver side,
Remove the dashboard cap under the
Steering Wheel.

Untwist wires at backside of the OBD connector (pin 6 & 14)
Place Brown wire in CAN High
Place Yellow wire in CAN Low
Close CANcliQ.

Connections at backside of the OBD connector.

Ground (KL31) :
OBD Connector pin 4 and pin 5 (Green Yellow arrow).

Continuous Power (KL30) :
OBD Connector pin 16 (Red arrow).

Power on Ignition (KL15) :
OBD Connector pin 1 (Brown arrow).

Warning! CANcliQ closes only once. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires.

