

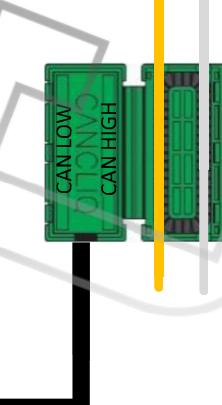
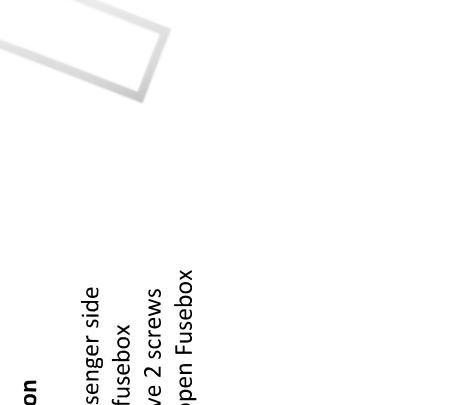
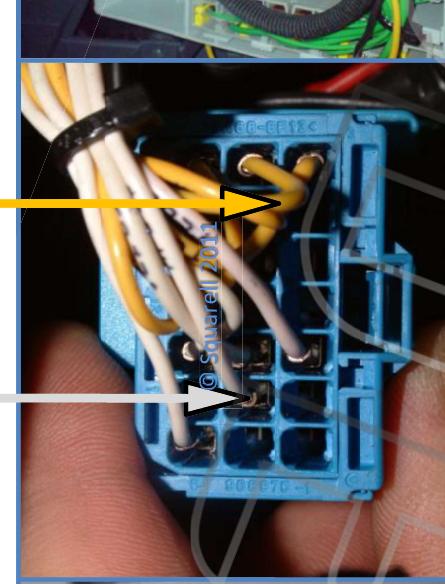
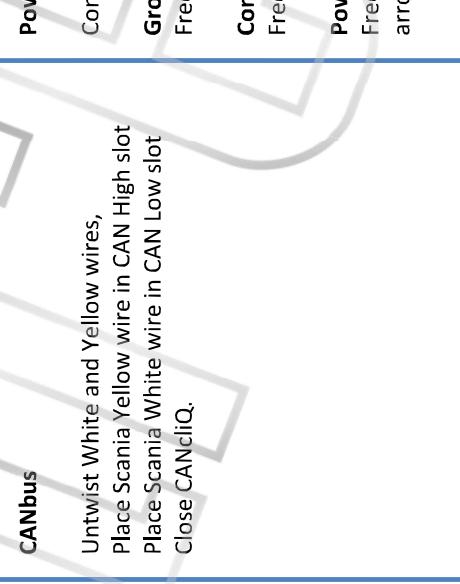
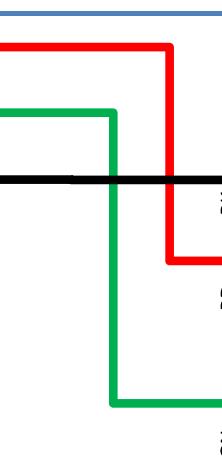
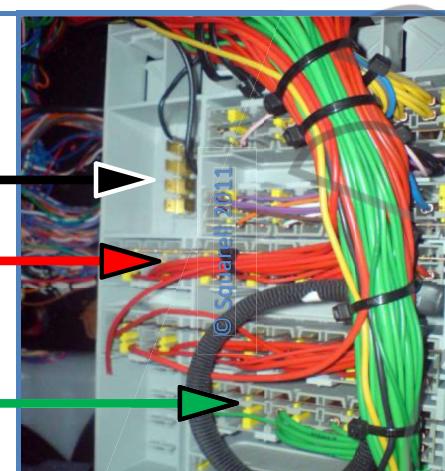
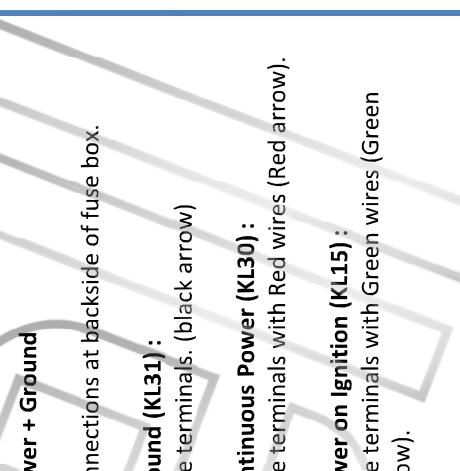
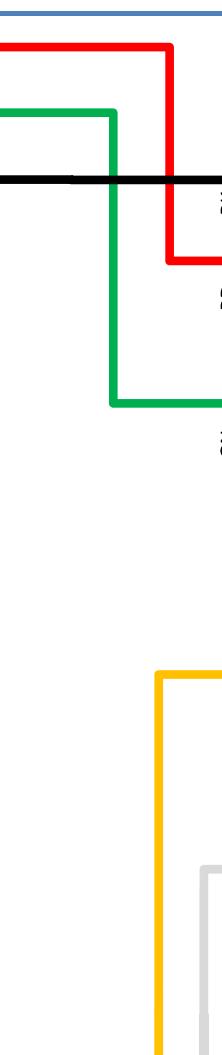
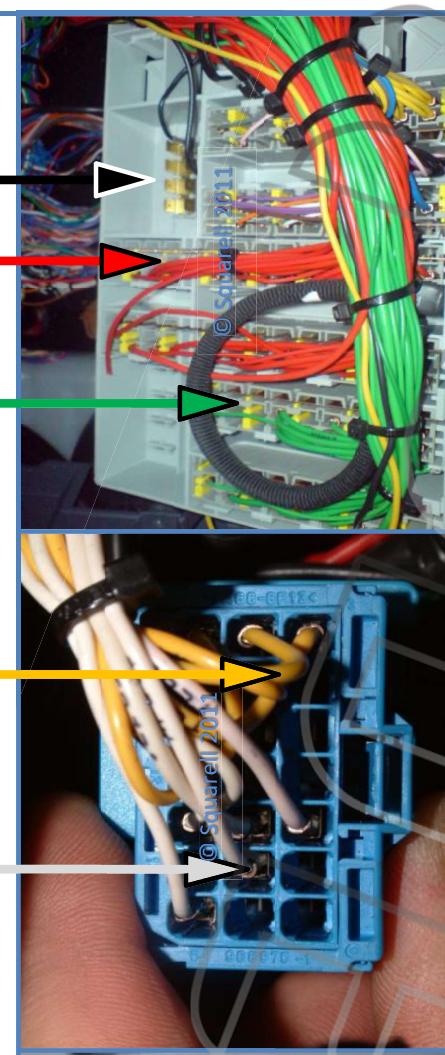
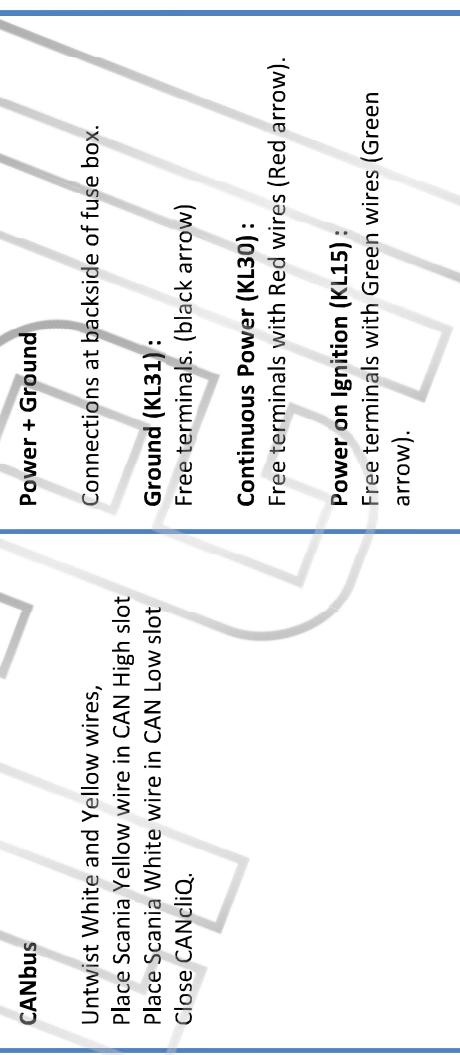
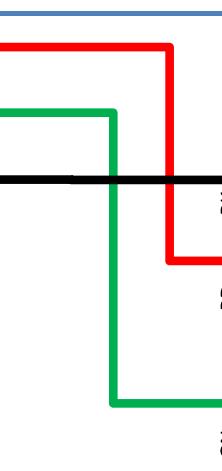
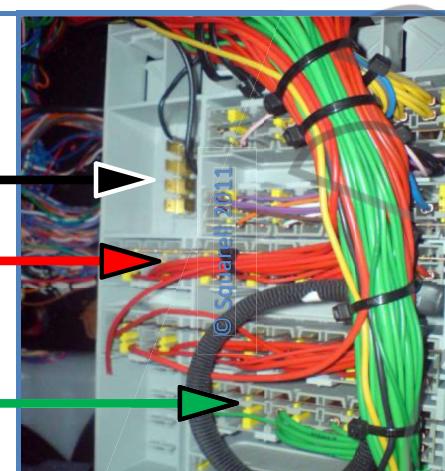
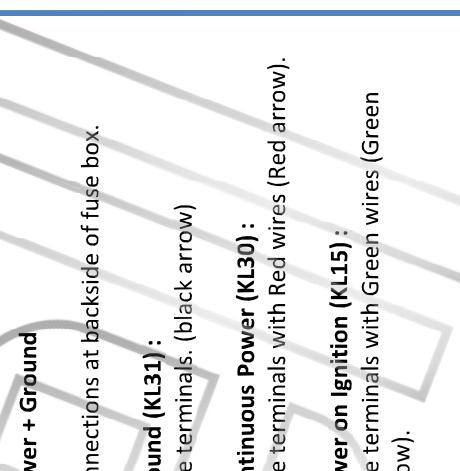
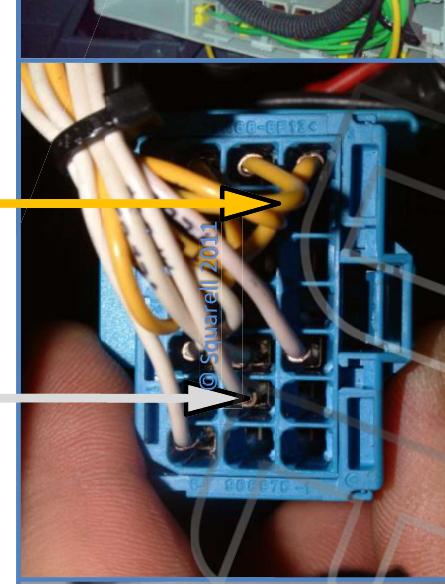
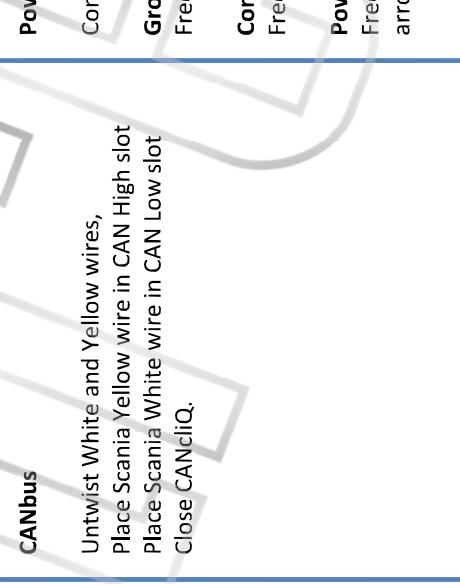
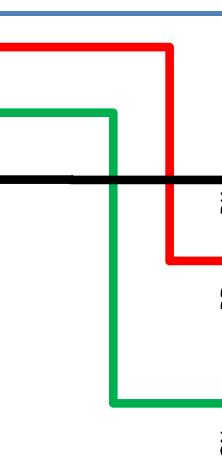
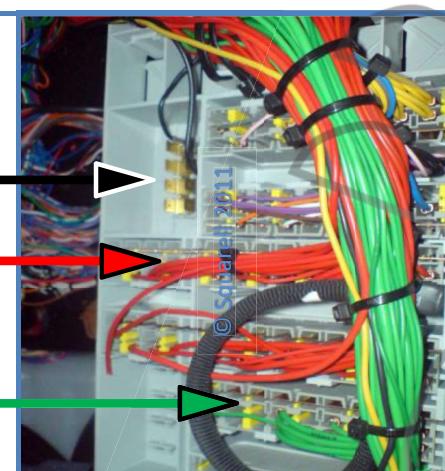
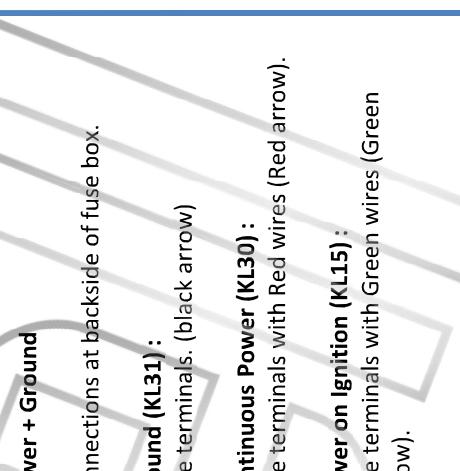
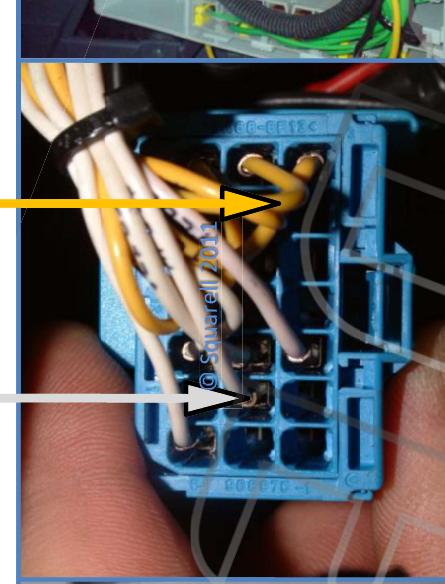
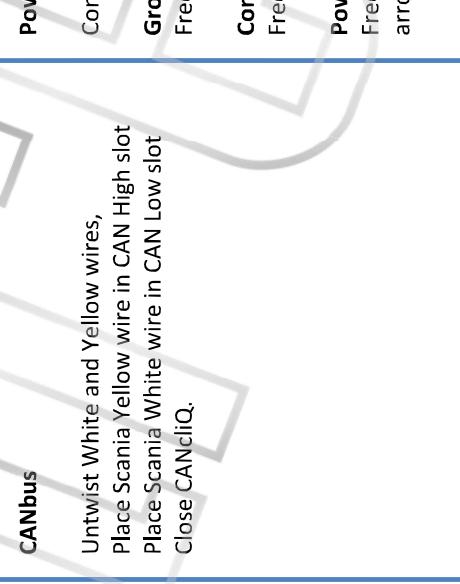
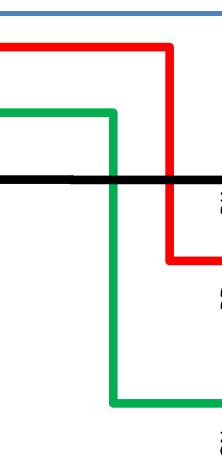
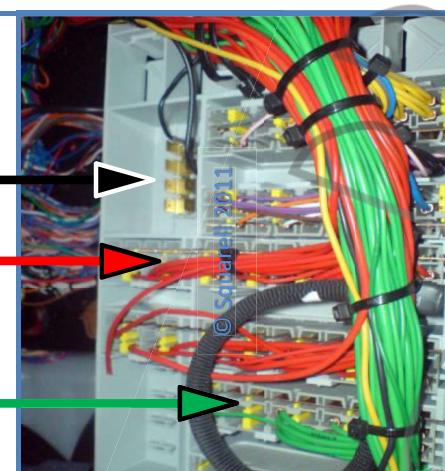
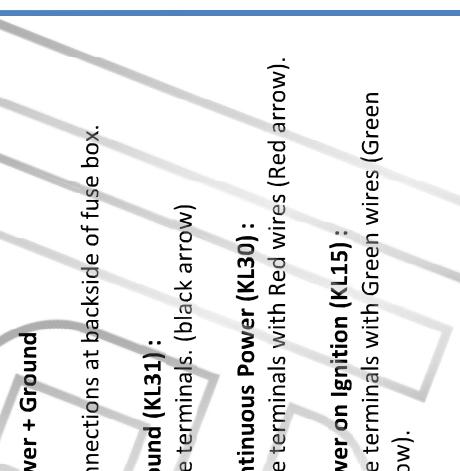
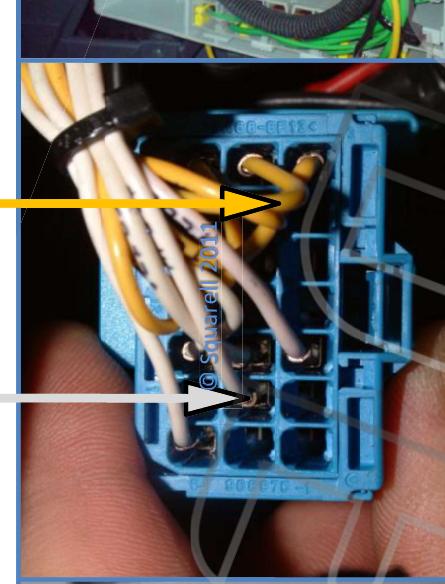
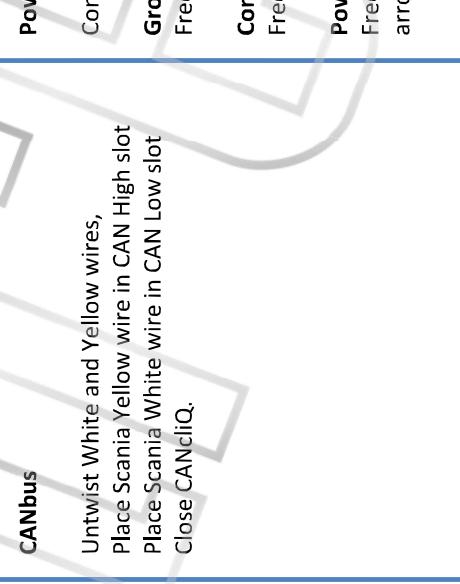
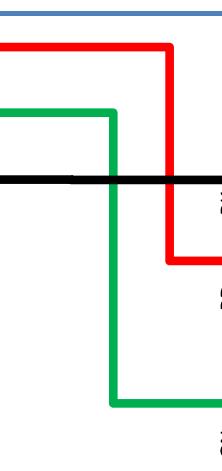
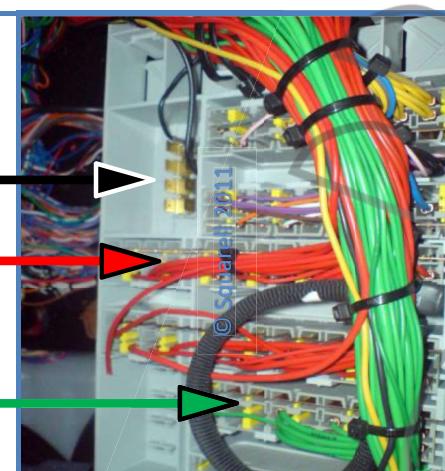
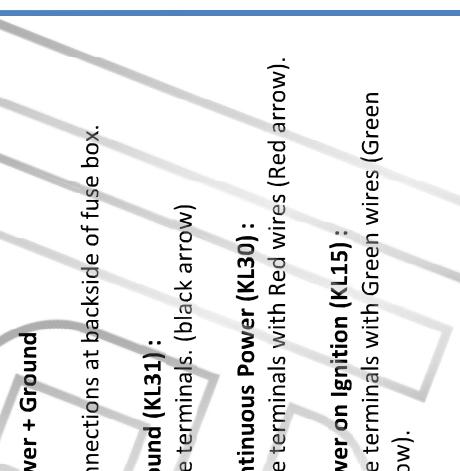
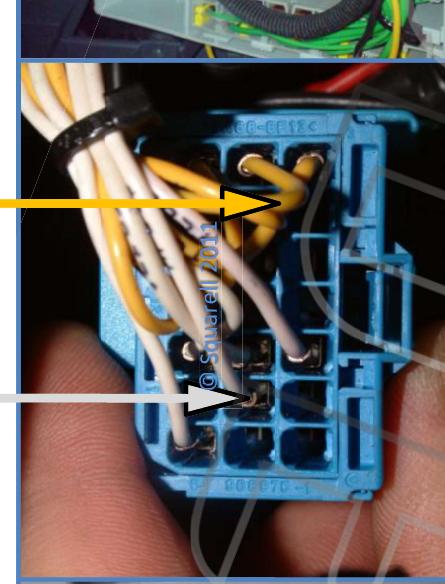
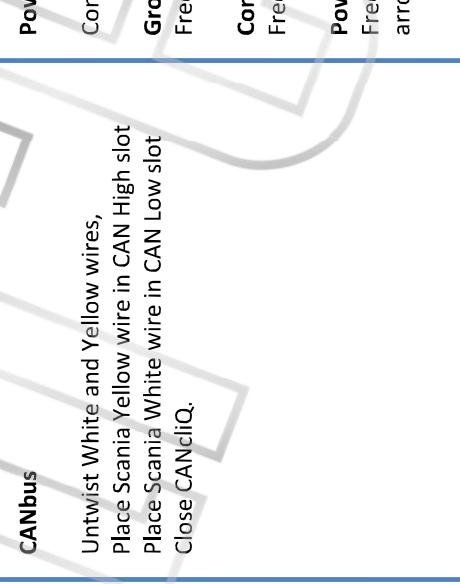
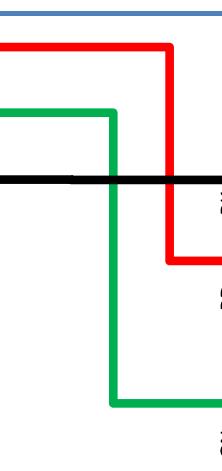
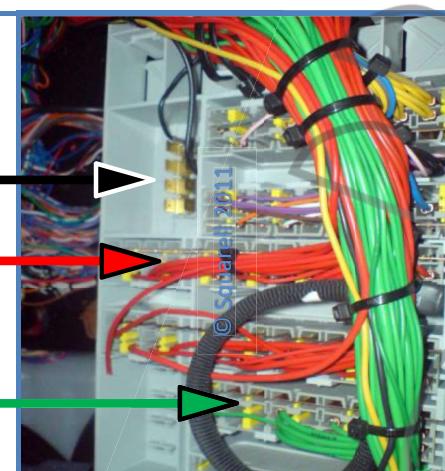
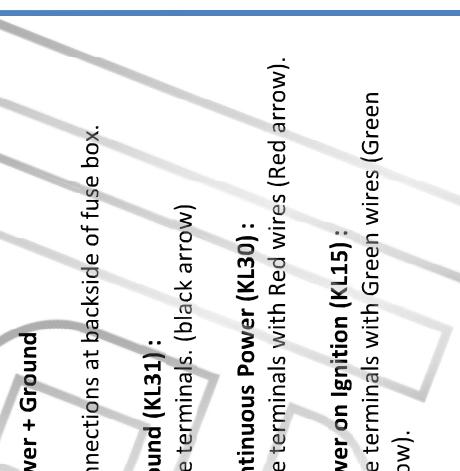
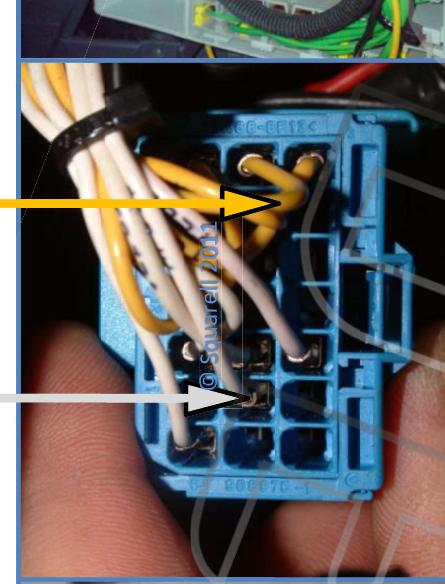
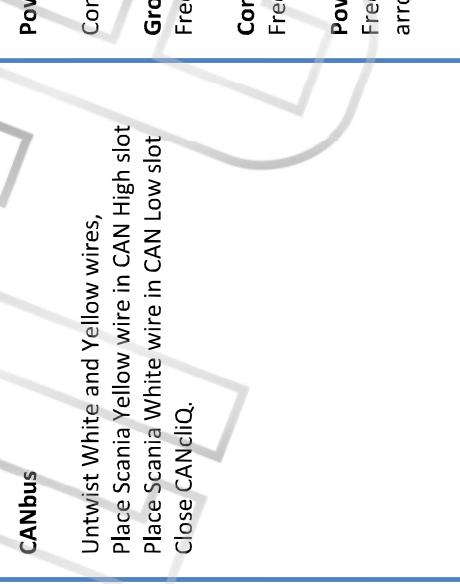
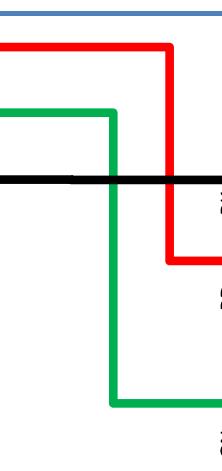
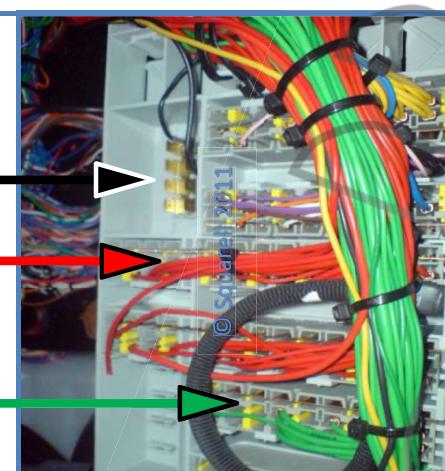
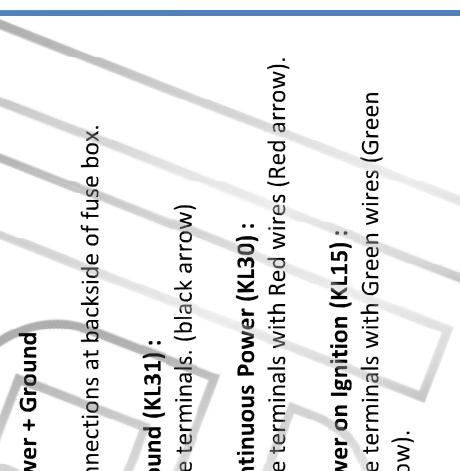
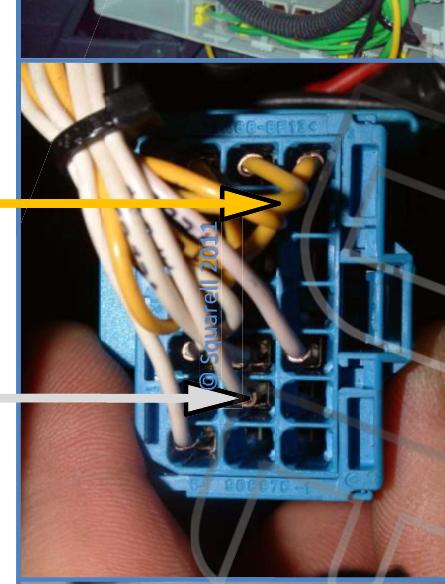
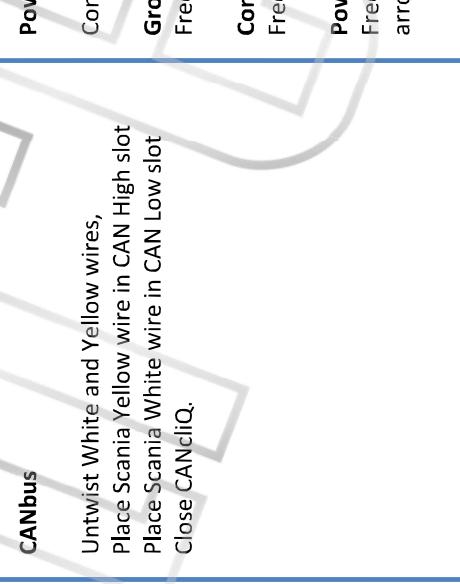
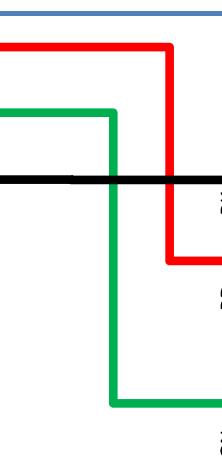
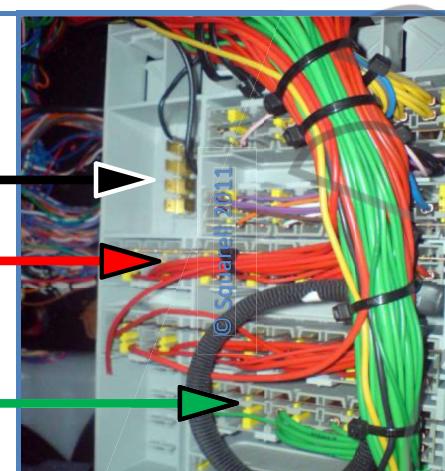
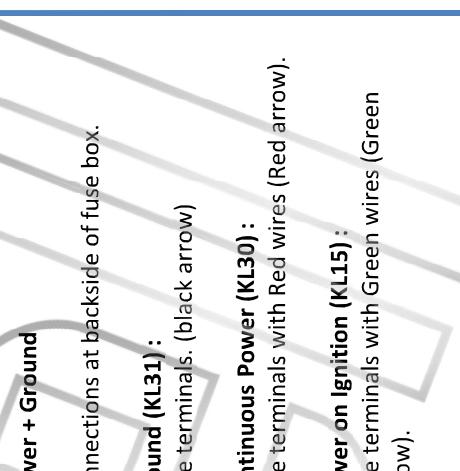
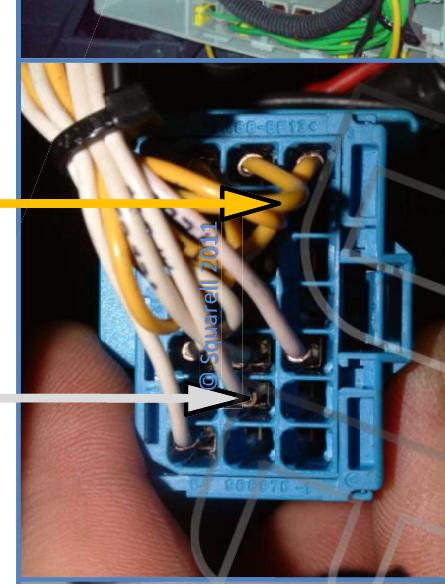
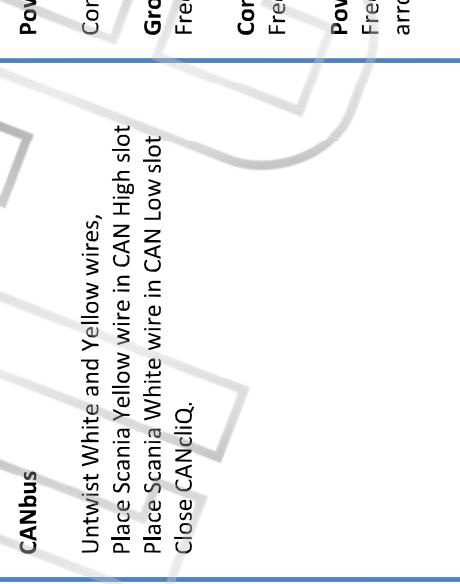
# Scania 4-Series 1995-1999

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z					
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity	
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
	<p><b>Power + Ground</b></p> <p>Connections at backside of fuse box.</p> <p><b>Ground (KL31) :</b> Free terminals. (black arrow)</p> <p><b>Continuous Power (KL30) :</b> Fuse location number 40/41 (Red arrow).</p> <p><b>Power on Ignition (KL15) :</b> Fuse location number 44/45 (Green arrow).</p>	<p><b>CANbus</b></p> <p>Find in the middle of the area under need the fuse box the Black connector with twisted Grey and Blue wires.</p> <p>Untwist Grey and Blue wires. place Scania Blue wire in CAN High place Scania Grey wire in CAN Low Close CANcliQ.</p>	<p><b>Location</b></p> <p>At passenger side Open fusebox Remove 2 screws Turn open Fusebox</p>	<p><b>Warning!</b> CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. This vehicle type is not supporting the Vehicle Distance (odometer), Total Fuel Used and the Fuel Level on the Direct CANbus. Squarell unit will start counting the Vehicle Distance (odometer) and the Total Fuel Used since the installation.</p>																										

# Scania 4-Series 2000-2004

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z					
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
	<p><b>Power + Ground</b></p> <p>Connections at backside of fuse box.</p> <p><b>Ground (KL31) :</b> Free terminals. (black arrow)</p> <p><b>Continuous Power (KL30) :</b> Fuse location number 40/41 (Red arrow).</p> <p><b>Power on Ignition (KL15) :</b> Fuse location number 44/45 (Green arrow).</p>	<p><b>CANbus</b></p> <p>Find in the middle of the area under need the fuse box the Black connector with twisted Grey and Blue wires.</p> <p>Untwist Grey and Blue wires. place Scania Blue wire in CAN High place Scania Grey wire in CAN Low Close CANcliQ.</p>	<p><b>Location</b></p> <p>At passenger side Open fusebox Remove 2 screws Turn open Fusebox</p>	<p><b>Power + Ground</b></p> <p>Find in the middle of the area under need the fuse box the Black connector with twisted Grey and Blue wires.</p> <p>Untwist Grey and Blue wires. place Scania Blue wire in CAN High place Scania Grey wire in CAN Low Close CANcliQ.</p> <p><b>CANbus</b></p> <p>Find in the middle of the area under need the fuse box the Black connector with twisted Grey and Blue wires.</p> <p>Untwist Grey and Blue wires. place Scania Blue wire in CAN High place Scania Grey wire in CAN Low Close CANcliQ.</p> <p><b>Location</b></p> <p>At passenger side Open fusebox Remove 2 screws Turn open Fusebox</p>	<p><b>Warning!</b> CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. This vehicle type is not supporting the Vehicle Distance (odometer), Total Fuel Used and the Fuel Level on the Direct CANbus. Squarell unit will start counting the Vehicle Distance (odometer) and the Total Fuel Used since the installation.</p> <p>Version 22032011 ENG Copyright © Squarell 2011</p>																									

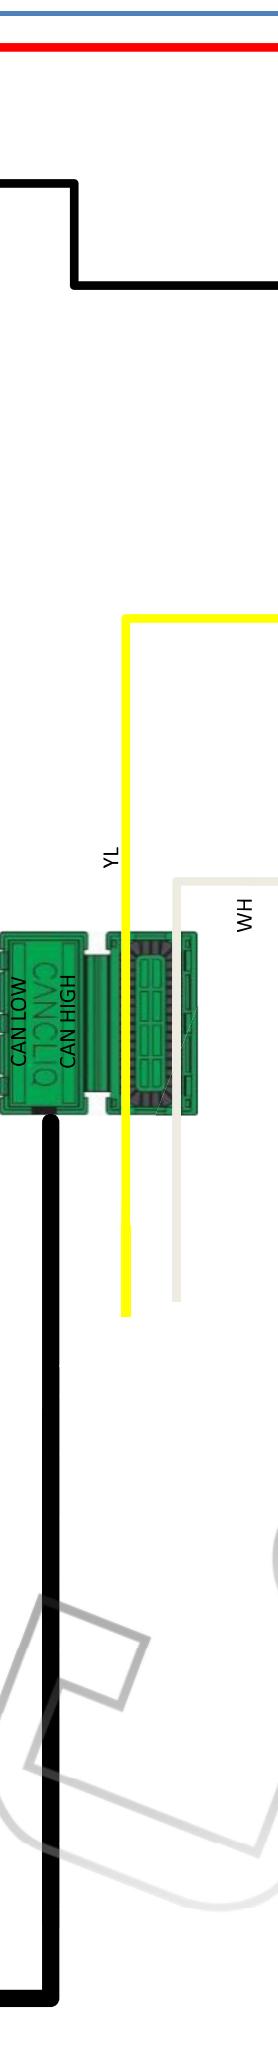
# Scania G-Series (1st gen) 2007-2009

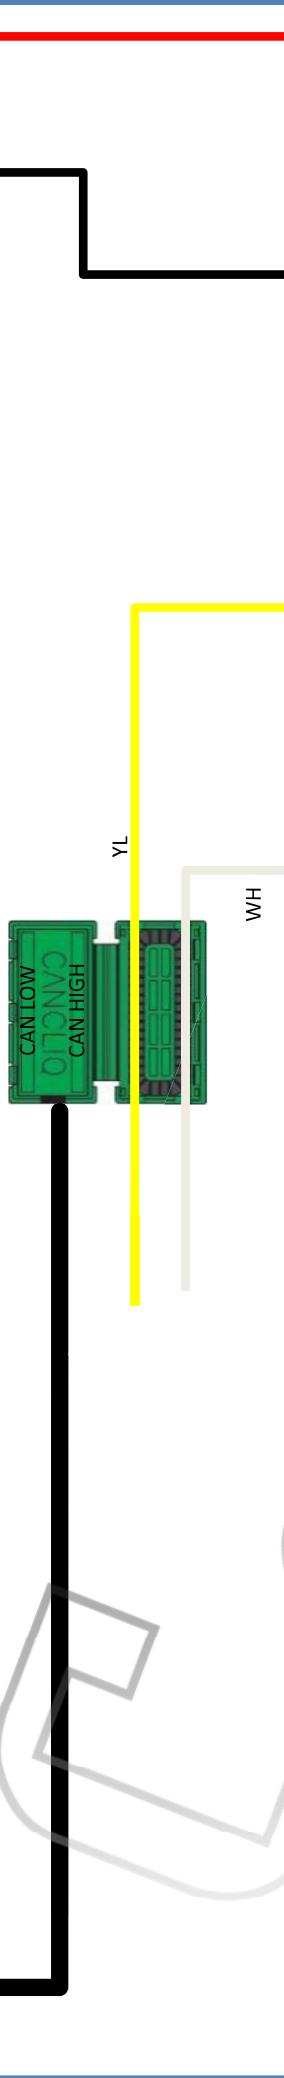
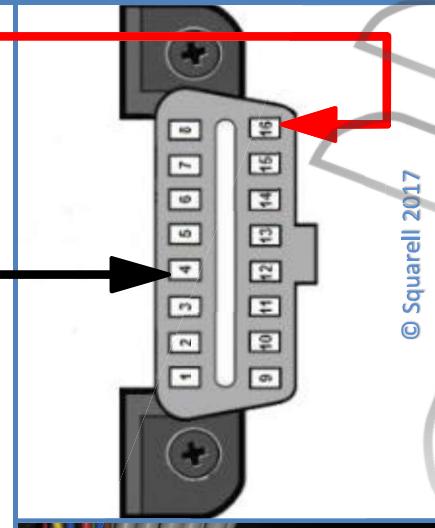
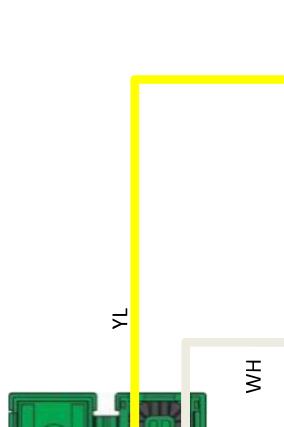
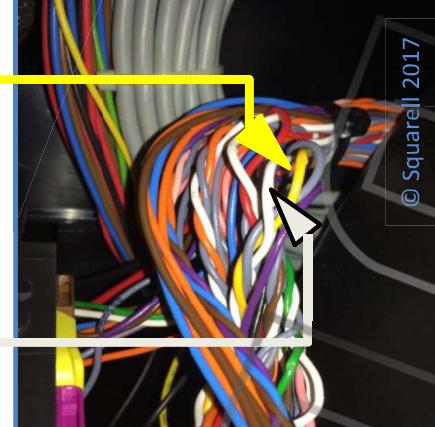
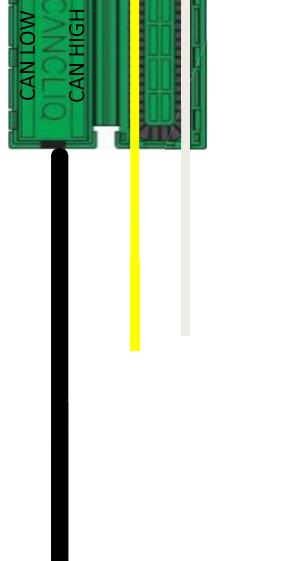
A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z																																																																																																																																																															
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity																																																																																																																																																											
																																																																																																																																																																																								

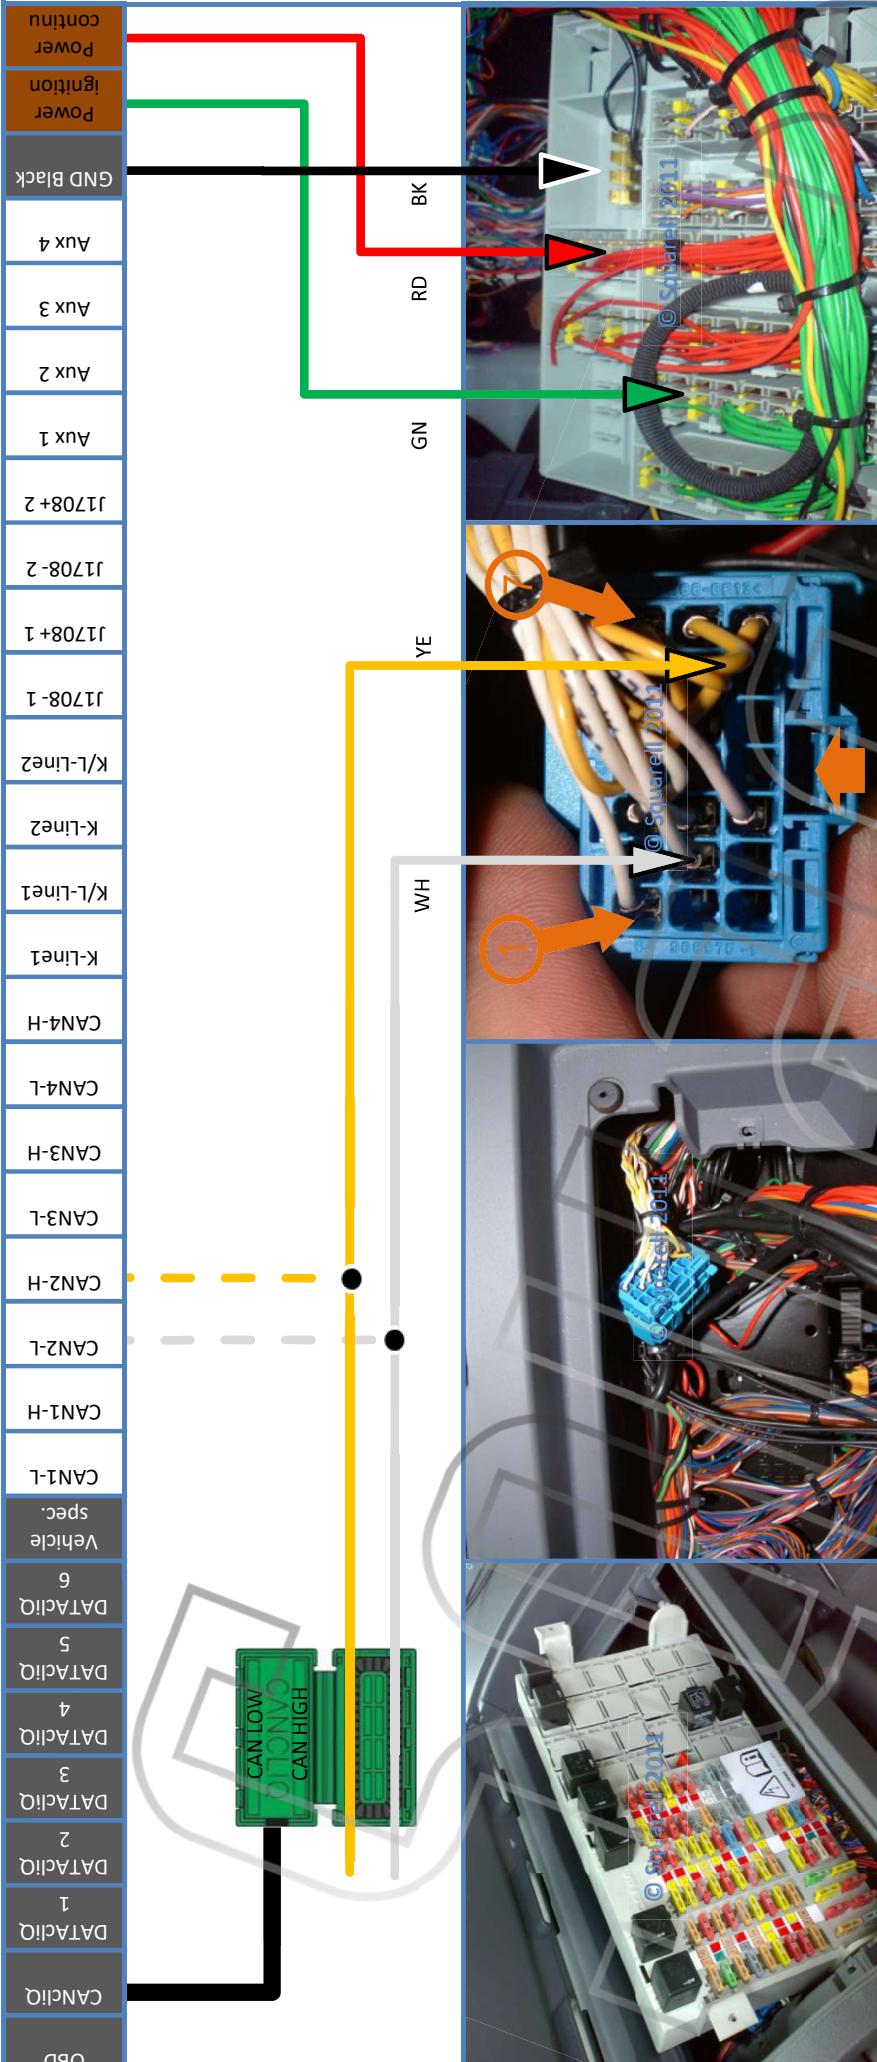
# Scania G-Series (1<sup>st</sup> gen Facelift) 2010-2016

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z				
OBD	CANclIQ	DATAClIQ 1	DATAClIQ 2	DATAClIQ 3	DATAClIQ 4	DATAClIQ 5	DATAClIQ 6	Vehicle spec.	CAN1-L	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity	Power + Ground
CANclIQ	DATAClIQ 1	DATAClIQ 2	DATAClIQ 3	DATAClIQ 4	DATAClIQ 5	DATAClIQ 6	Vehicle spec.	CAN1-L	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity	Power + Ground	
OBD	CANclIQ	DATAClIQ 1	DATAClIQ 2	DATAClIQ 3	DATAClIQ 4	DATAClIQ 5	DATAClIQ 6	Vehicle spec.	CAN1-L	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity	Power + Ground
OBD	CANclIQ	DATAClIQ 1	DATAClIQ 2	DATAClIQ 3	DATAClIQ 4	DATAClIQ 5	DATAClIQ 6	Vehicle spec.	CAN1-L	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity	Power + Ground
	<p><b>Power + Ground</b></p> <p>Connections at backside of fuse box.</p> <p><b>Ground (KL31):</b> Free terminals. (black arrow)</p> <p><b>Continuous Power (KL30):</b> Free terminals with Red wires (Red arrow).</p> <p><b>Power on Ignition (KL15):</b> Free terminals with Green wires (Green arrow).</p>	<p>Warning! CANclIQ or DataclIQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires.</p>																											
	<p><b>CANbus</b></p> <p>Untwist White and Yellow wires, Place Scania Yellow wire in CAN High slot Place Scania White wire in CAN Low slot Close CANclIQ.</p> <p>*Any White or Yellow can be used as they are all connected in the connector.</p>	<p>Blue connector at door side with twisted Yellow and White wires. Connector can be hidden inside wiring loom.</p>																											
	<p><b>Location</b></p> <p>At passenger side Open fusebox Remove 2 screws Turn open Fusebox</p>																												

# Scania G-series (2nd gen) 2016+

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z			
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN2-H	CAN3-L	CAN3-H	CAN4-H	CAN4-L	K-Line1	K-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
		<p><b>Location</b></p> <p>Find the CAN-bus wires at the passenger side. Located behind the fuse box. Which is behind the dashboard cover. Remove the lower dashboard cover (Orange arrow).</p> <p><b>COO Module (E30)</b></p> <p>Module: COO (E30). (Orange arrow) Connector: B Pin CAN High: B-2 (Yellow) Pin CAN Low: B-11 (White)</p> <p><b>CANbus</b></p> <p>Remove the lower dashboard panel to gain access to the fuse box. Remove the fuse box to gain access to the COO Module (E30).</p> <p>Untwist the pin B-2 Yellow and B-11 White wires from the COO Module. Place the Yellow wire from pin B-2 in the CAN High Slot. Place the White wire from pin B-11 in the CAN Low slot. Close the CANcliQ housing.</p> <p><b>Power + Ground</b></p> <p>Connections in OBD connector</p> <p><b>Ground (KL31)</b>: OBD connector pin 4 and pin 5</p> <p><b>Continuous Power (KL30)</b>: Pin 16 OBD connector</p>		<p><b>Warning!</b> CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.</p> <p>Version 160707 ENG Copyright © Squarell 2016</p>																								

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z		
<b>Scania L-series (1st gen) 2018+</b>																											
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN2-H	CAN3-L	CAN3-H	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continu
			<p><b>Power + Ground</b> Connections in OBD connector</p> <p><b>Ground (KL31):</b> OBD connector pin 4 and pin 5</p> <p><b>Continuous Power (KL30):</b> Pin 16 OBD connector</p> <p>© Squarell 2017 watermark</p>																								
			<p><b>CANbus</b></p> <p>Untwist the pin B-2 Yellow and B-11 White wires from the COO Module.</p> <p>Place the Yellow wire from pin B-2 in the CAN High Slot.</p> <p>Place the White wire from pin B-11 in the CAN Low slot.</p> <p>Close the CANcliQ housing.</p> <p>© Squarell 2017 watermark</p>																								
			<p><b>Location</b></p> <p>Find the CAN-bus wires at the passenger side. Located behind the fuse box. Remove the lower dashboard cover (Orange arrow).</p> <p>Module: COO (E30). (Orange arrow)</p> <p>Connector: B</p> <p>Pin CAN High: B-2 (Yellow)</p> <p>Pin CAN Low: B-11 (White)</p> <p>© Squarell 2017 watermark</p>																								
			<p><b>Location</b></p> <p>Find the CAN-bus wires at the passenger side. Located behind the fuse box. Which is behind the dashboard cover. Remove the lower dashboard cover (Orange arrow).</p> <p>© Squarell 2017 watermark</p>	<p>Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.</p>																							



location

- At passenger side
- Open fusebox
- Remove 2 screws
- Turn open Fusebox

Blue connector at door side with twisted Yellow and White wires. Connector can be hidden inside wiring loom.

- Untwist White and Yellow wires,
- Place Scania Yellow wire in CAN High slot
- Place Scania White wire in CAN Low slot
- Close CANcliQ.

Connections at backside of fuse box.

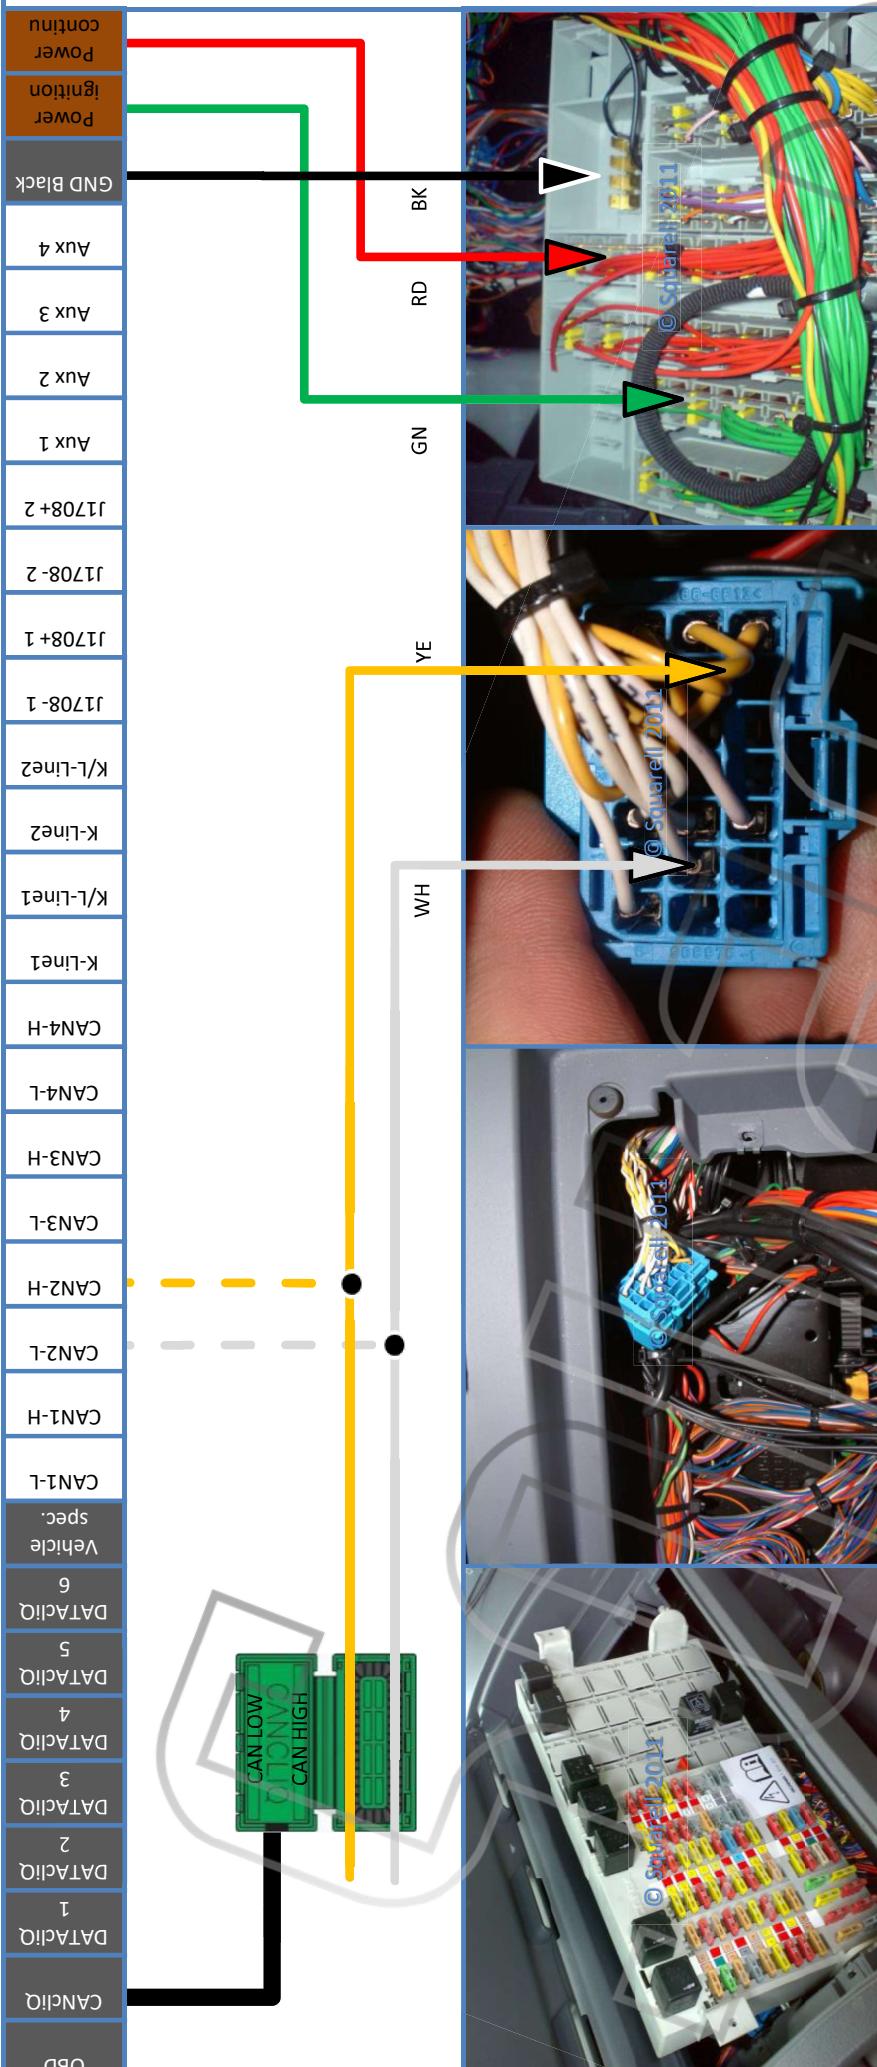
**Ground (KL31):**  
Free terminals. (black arrow)  
**Continuum Power (KL20):**

**Continuous Power (KL30) :**  
Free terminals with Red wires (Red arrow).

**Power on Ignition (KL15) :** Free terminals with Green wires (Green arrow).

**[Warning]** Please repower the Squarell Device after the installation is completed. Please use certified crimping tools to connect the wires.

Scania P-Series (1st gen Facelift) 2010+



1 - 2 - 3

- At passenger side
- Open fusebox
- Remove 2 screws
- Turn open Fusebox

- Untwist White and Yellow wires,
- Place Scania Yellow wire in CAN High slot
- Place Scania White wire in CAN Low slot
- Close CANcliQ.

Connections at backside of fuse box.

**Free terminals.** (black arrow)

\*Any White or Yellow can be used as they are all connected in the connector.

卷之三

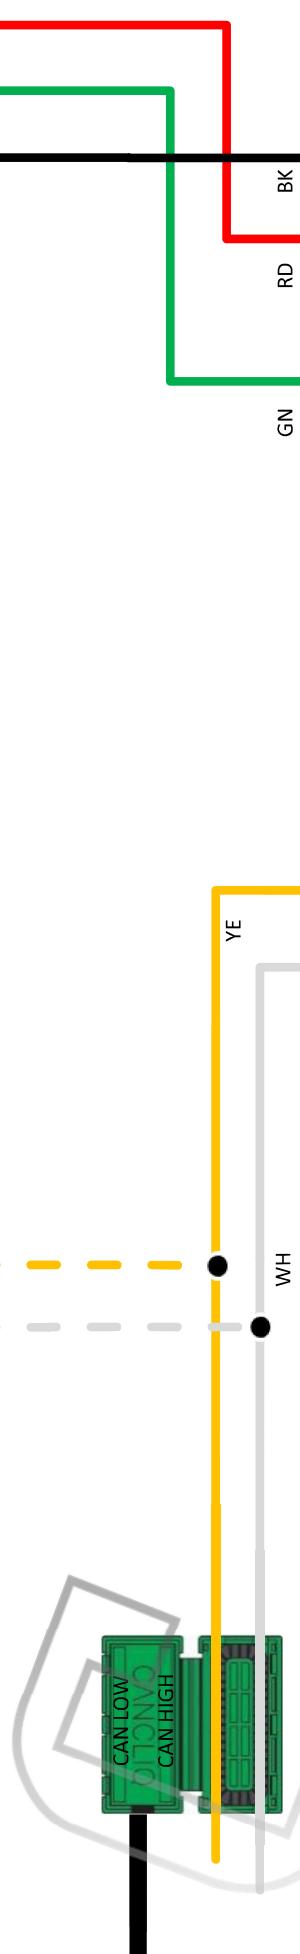
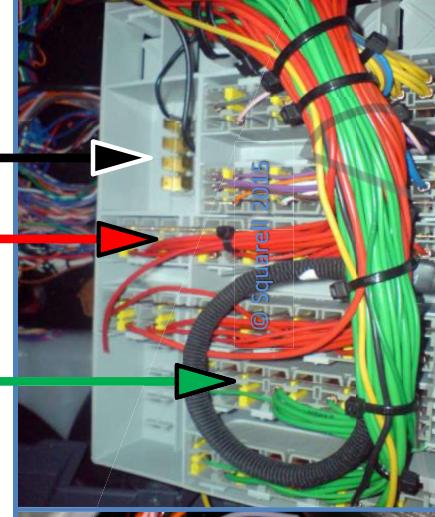
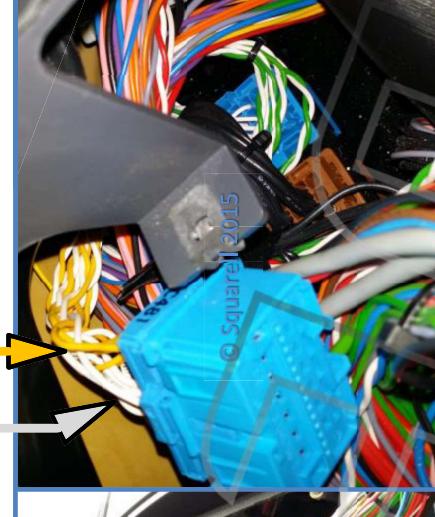
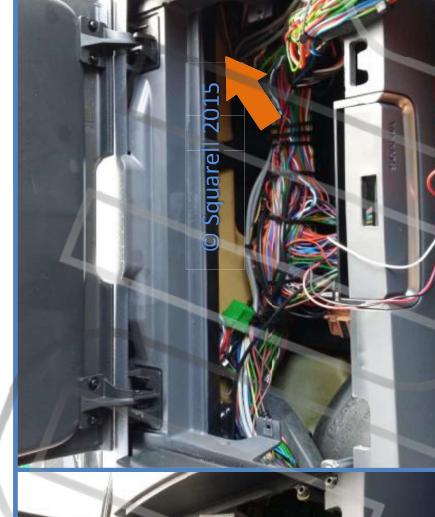
**[Warning]** CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires.

# Scania P-series (2nd gen) 2016+

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z				
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN2-H	CAN3-L	CAN3-H	CAN4-H	CAN4-L	K-Line1	K-Line2	K/L-Line1	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
<p><b>Location</b></p> <p>Find the CAN-bus wires at the passenger side. Located behind the fuse box. Which is behind the dashboard cover. Remove the lower dashboard cover (Orange arrow).</p>																													
<p><b>Location</b></p> <p>Remove the lower dashboard panel to gain access to the fuse box.</p> <p>Remove the fuse box to gain access to the COO Module (E30).</p> <p>Module: COO (E30). (Orange arrow)</p> <p>Connector: B</p> <p>Pin CAN High: B-2 (Yellow)</p> <p>Pin CAN Low: B-11 (White)</p> <p><b>CANbus</b></p> <p>Untwist the pin B-2 Yellow and B-11 White wires from the COO Module.</p> <p>Place the Yellow wire from pin B-2 in the CAN High Slot.</p> <p>Place the White wire from pin B-11 in the CAN Low slot.</p> <p>Close the CANcliQ housing.</p> <p><b>Power + Ground</b></p> <p>Connections in OBD connector</p> <p><b>Ground (KL31):</b></p> <p>OBD connector pin 4 and pin 5</p> <p><b>Continuous Power (KL30):</b></p> <p>Pin 16 OBD connector</p>																													
<p><b>Warning!</b> CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.</p>																													

# Scania R-Series (1<sup>st</sup> gen) 2005-2011

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z			
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity
CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity	
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power Continuity
<p>The diagram illustrates the CANbus wiring for the Scania R-Series (1<sup>st</sup> gen) 2005-2011. It shows the connection of four wires to a blue CANcliQ connector:</p> <ul style="list-style-type: none"> <li>Yellow wire (labeled YE) connects to the CAN High slot.</li> <li>Grey wire (labeled WH) connects to the CAN Low slot.</li> <li>Red wire (labeled RD) connects to the Power terminal (black arrow).</li> <li>Green wire (labeled GN) connects to the Ground terminal (green arrow).</li> </ul> <p>Below the connector, a green box labeled "CANLOW" and "CANHIGH" is connected. The blue connector is shown being inserted into a slot. The final part of the diagram shows a fusebox with various fuses and wires.</p>	<p><b>Location</b></p> <p>At passenger side Open fusebox Remove 2 screws Turn open Fusebox</p> <p><b>CANbus</b></p> <p>Blue connector at door side with twisted Yellow and White wires. Connector can be hidden inside wiring loom.</p> <p><b>Power + Ground</b></p> <p>Connections at backside of fuse box.</p> <p><b>Ground (KL31):</b> Free terminals. (black arrow)</p> <p><b>Continuous Power (KL30):</b> Free terminals with Red wires (Red arrow).</p> <p><b>Power on Ignition (KL15):</b> Free terminals with Green wires (Green arrow).</p> <p><b>Warning!</b> CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires.</p>	<p>Version 18022013 ENG Copyright © Squarell 2012</p>																										

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z					
<b>Scania R-Series (1<sup>st</sup> gen Facelift) 2012-2016</b>																														
OBD	CANclIQ	DATAClIQ 1	DATAClIQ 2	DATAClIQ 3	DATAClIQ 4	DATAClIQ 5	DATAClIQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continu
	   	<p><b>Location</b></p> <p>At passenger side open up the dashboard and remove the two screws of the fuse panel. Cut the required tie wraps so you are able to lift out the fuse panel.</p> <p>After the installation replace the removed tie wraps.</p> <p><b>CANbus</b></p> <p>Untwist Yellow and White wires, Place Scania Yellow wire in CAN High slot Place Scania White wire in CAN Low slot Close CANcliQ.</p> <p><b>Power + Ground</b></p> <p>Connections at backside of fuse box.</p> <p><b>Ground (KL31) :</b> Free terminals. (black arrow)</p> <p><b>Continuous Power (KL30) :</b> Free terminals with Red wires (Red arrow).</p> <p><b>Power on Ignition (KL15) :</b> Free terminals with Green wires (Green arrow).</p>	<p>Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.</p>																											

# Scania R-series (2nd gen) 2016+

**Warning!** CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.

**Power + Ground**  
Connections in OBD connector

**Ground (KL31)**:  
OBD connector pin 4 and pin 5

**Continuous Power (KL30)**:  
Pin 16 OBD connector

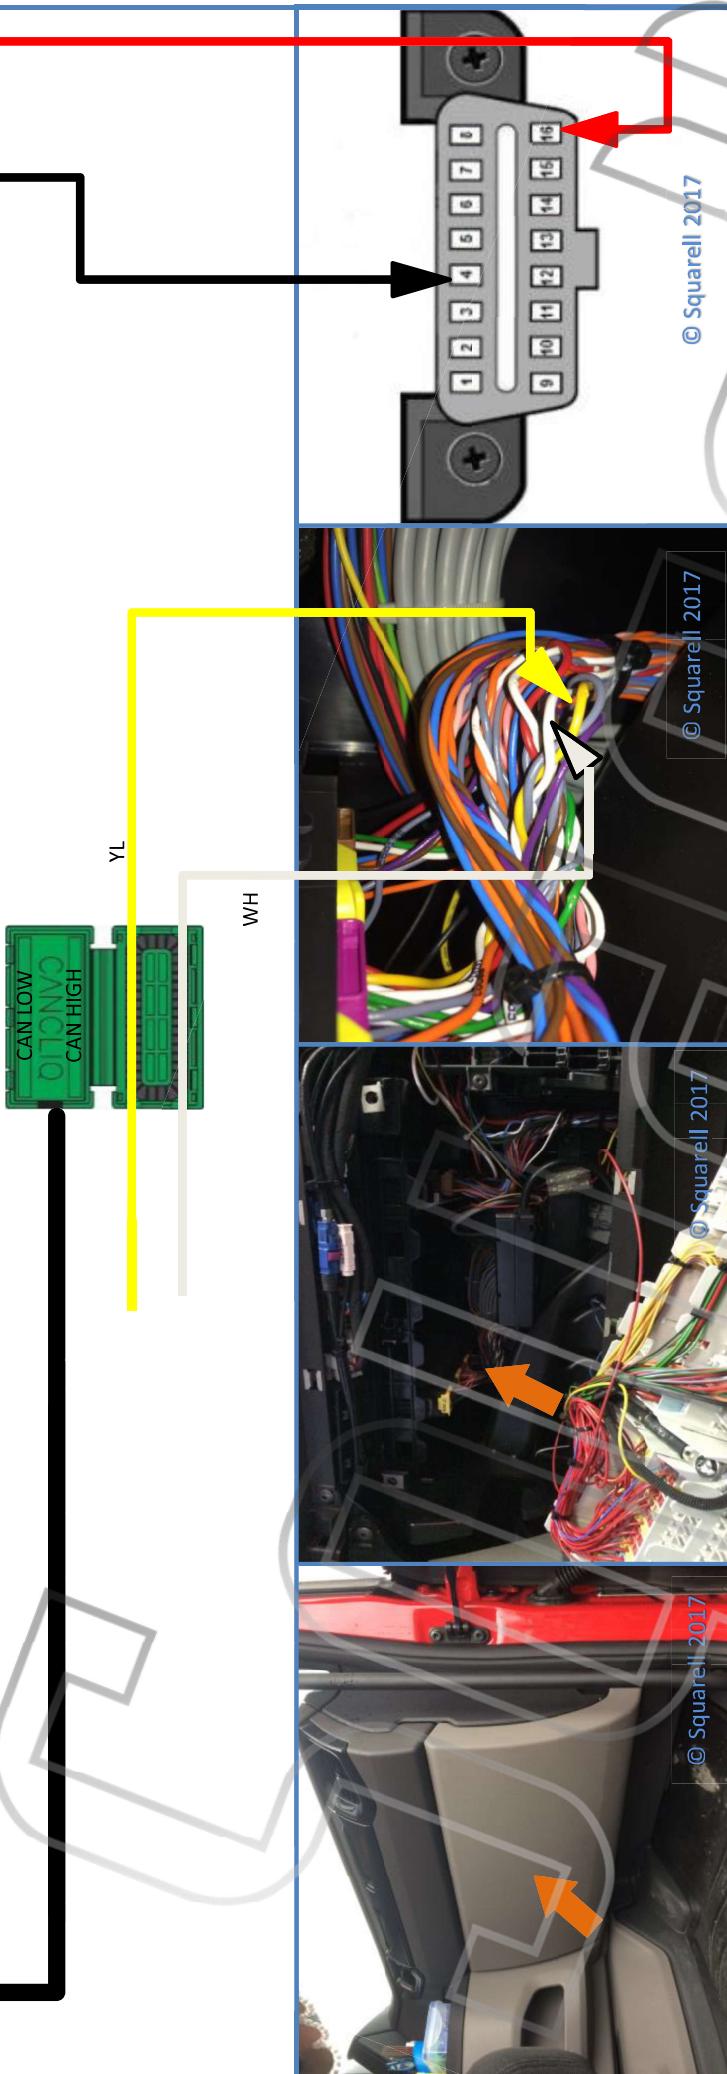
**CANbus**

Untwist the Yellow and White wires.  
Place the Yellow wire in the CAN High Slot.  
Place the White wire in the CAN Low slot.  
Close CANcliQ.

**Location**

Remove the dashboard cover and fuse box to find the wiring loom at the left side, that contains a yellow and white twisted pair of wires, with a grey ground wire.

Find the CAN-bus wires at the passenger side. Located behind the fuse box. Which is behind the dashboard cover.



A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z		
Scania S-series (1 <sup>st</sup> gen) 2016+																											
<p>The diagram shows the wiring for the Scania S-series (1<sup>st</sup> gen) 2016+. It includes a vertical list of pins on the left and three main sections on the right: Location, CANbus, and Power + Ground.</p> <ul style="list-style-type: none"> <li><b>Location:</b> Shows the CAN-bus wires at the passenger side behind the dashboard cover.</li> <li><b>CANbus:</b> Shows the CANLOW and CANHIGH wires being untwisted and placed in the CAN High Slot, followed by the CANLOW and CANHIGH wires being placed in the CAN Low slot and the CANcliQ module being closed.</li> <li><b>Power + Ground:</b> Shows the connection of the Power and Ground wires from the CANcliQ module to the OBD connector pin 4 and pin 5, and the continuous power connection to pin 16 of the OBD connector.</li> </ul> <p><b>Warning!</b> CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 30V power supply. Please use certified crimping tools to connect the wires.</p>																											

# Scania T-Series with EDC 1998-2000

	Location	CANbus	Power + Ground	
OBD	At passenger side Open fusebox Remove 2 screws Turn open Fusebox		 Find in the middle of the area under need the fuse box the Black connector with twisted Grey and Blue wires. Untwist Grey and Blue wires. place Scania Blue wire in CAN High place Scania Grey wire in CAN Low Close CANcliQ.	<b>Power on Ignition (KL15) :</b> Fuse location number 44/45 (Green arrow).  <b>Continuous Power (KL30) :</b> Fuse location number 40/41 (Red arrow).
Vehicle spec.				 Connections at backside of fuse box. <b>Ground (KL31) :</b> Free terminals. (black arrow)

**Warning!** CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. This vehicle type is not supporting the Vehicle Distance (odometer), Total Fuel Used and the Fuel Level on the Direct CANbus. Squarell unit will start counting the Vehicle Distance (odometer) and the Total Fuel Used since the installation.

# Scania T-Series 2000-2004

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z					
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity	
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
OBD	CANcliQ	DATAcliQ 1	DATAcliQ 2	DATAcliQ 3	DATAcliQ 4	DATAcliQ 5	DATAcliQ 6	Vehicle spec.	CAN1-L	CAN1-H	CAN2-L	CAN2-H	CAN3-L	CAN3-H	CAN4-L	CAN4-H	K/L-Line1	K/L-Line2	J1708-1	J1708+1	J1708-2	J1708+2	Aux 1	Aux 2	Aux 3	Aux 4	GND Black	Power Ignition	Power	continuity
	<p><b>Power + Ground</b> Connections at backside of fuse box.</p> <p><b>Ground (KL31) :</b> Free terminals. (black arrow)</p> <p><b>Continuous Power (KL30) :</b> Fuse location number 40/41 (Red arrow).</p> <p><b>Power on Ignition (KL15) :</b> Fuse location number 44/45 (Green arrow).</p>	<p>Warning! CANcliQ or DatacliQ closes only once. Please repower the Squarell Device after the installation is completed. Please connect Squarell devices to a 10V to 48V power supply. Please use certified crimping tools to connect the wires. This vehicle type is not supporting the Vehicle Distance (odometer), Total Fuel Used and the Fuel Level on the Direct CANbus. Squarell unit will start counting the Vehicle Distance (odometer) and the Total Fuel Used since the installation.</p>																												
	<p><b>Location</b></p> <p>At passenger side Open fusebox Remove 2 screws Turn open Fusebox</p> <p><b>CANbus</b></p> <p>Find in the middle of the area under need the fuse box the Black connector with twisted Grey and Blue wires. Untwist Grey and Blue wires. place Scania Blue wire in CAN High place Scania Grey wire in CAN Low Close CANcliQ.</p>	<p>Version 22032011 ENG Copyright © Squarell 2011</p>																												